




POWERWASH COMPACT

UPRIGHT CARPET CLEANER

MODEL 4055E

- Important Safety Instructions2
- What's in the Box?.....3
- Assembly3
- Filling the Clean Water Tank4
- Cleaning Carpets and Area Rugs.....5
- Emptying the Dirty Water Tank.....6
- After-Cleaning Care.....7
- Replacing the Belt & Brush Roll8
- Storing Your Machine.....9
- Troubleshooting.....9
- Limited Warranty10

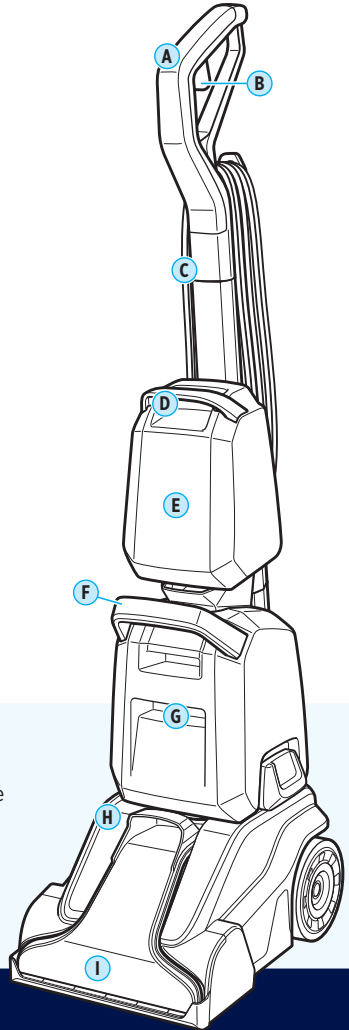

Product Overview

- A. Upper Handle
- B. Spray Trigger
- C. Middle Handle
- D. Clean Water Tank Handle
- E. Clean Water Tank
- F. Dirty Water Tank Handle
- G. Dirty Water Tank
- H. Lower Body
- I. Nozzle



Meet your new BISSELL® product!

Scan the QR Code for a video walkthrough. Want to get started right away? This guide has all the information you need to get started. Let's take a look...

SYMBOL	EXPLANATION
	Caution.
	Read operator's manual.
	Risk of fire.
	Risk of electric shock.
	For indoor use only.
	Do not overwet carpet. Use only on carpet moistened by the cleaning process.
	Use only BISSELL® cleaning formulas intended for use with this machine.
	Disconnect power before servicing.
	Protection against moving parts.
	Risk of automatic start-up.

SYMBOL	EXPLANATION
	Allow parts to dry.
	Use warm water, temperature up to 60°C.
	Check the manufacturer's tag before cleaning textile. "W" on the tag as shown means you can use your cleaner.
	Lock.
	Do not freeze.
	Motorized cleaning head for water suction cleaning.
	This symbol on the product and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points. Please contact your local authority for further details of your nearest designated collection point.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE. When using an electrical appliance, basic precautions should be observed, including the following:



WARNING TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Floor slippery when wet.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance, and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- Use only as described in this user guide.
- Use only manufacturer's recommended attachments.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorised service center.
- Do not put any object into openings.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as petroleum, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.

- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapours.
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Do not pull or carry by cable, use cable as a handle, close door on cable, or pull cable around sharp edges or corners. Keep cable away from heated surfaces.
- A hazard may occur if the appliance runs over the supply cord.
- The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- To unplug, grasp the plug, not the cable.
- Do not handle plug or appliance with wet hands. Turn off all controls before unplugging.
- If the appliance has a hand held accessory like pet brush, motor driven head, etc., the user shall avoid entrapment.
- If your appliance is fitted with a nonwireable BS 1363 plug it must not be used unless a 13 amp (ASTA approved to BS 1362) fuse is fitted in the carrier contained in the plug. Spares may be obtained from your BISSELL supplier. If for any reason the plug is cut off, it must be disposed of, as it is an electric shock hazard should it be inserted into a 13 amp socket.
- Use indoors only.
- Always connect to a properly earthed electrical socket. Do not modify earthed plug.
- Liquid must not be directed towards equipment containing electrical components.
- Use only the type and amount of liquids specified under the operations section of this guide.






SAVE THESE INSTRUCTIONS

ORIGINAL INSTRUCTIONS. FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ POWER SUPPLY ONLY. THIS MODEL IS FOR HOUSEHOLD USE ONLY.

IMPORTANT INFORMATION




- Keep appliance on a level surface.
- If your appliance has a motorised Brush Roll, do not leave machine running in the same spot without the handle fully upright.
- To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.
- Do not turn ON your appliance until you are familiar with all instructions and operating procedures.


What's in the Box?

				
Upper Handle	Middle Handle	Dirty Water Tank and Lower Body	Clean Water Tank	BISSELL® Trial-Size Formula

    Assembly




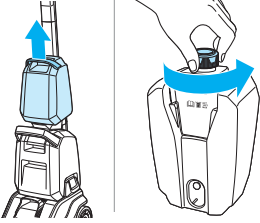
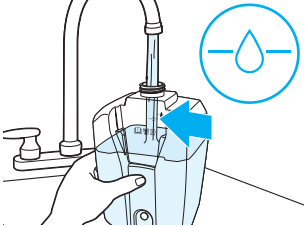
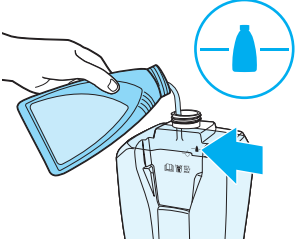
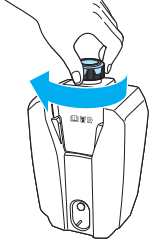
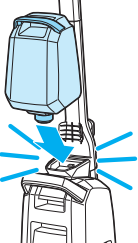
		
1. Slide middle handle into lower body until it “clicks” into place.	2. Slide upper handle into middle handle until it “clicks” into place.	3. Align clean water tank with grooves on machine and push down until it “clicks” into place.


4. Wrap power cord around cord wraps.

Filling the Clean Water Tank



This machine is compatible with BISSELL® formulas made for upright carpet cleaners. For optimal performance, use genuine BISSELL formulas in your machine. Other formulas or household cleaners may cause defects or damage to the machine.

		
<p>1. Choose your formula.*</p>	<p>2. Lift the clean water tank up to remove from the machine. Unscrew the cap to add water.</p>	<p>3. Fill the tank with warm tap water (60°C MAX) to the WATER line. Do not use boiling water. Do not heat water or tank in microwave.</p>
		
<p>4. Add formula to FORMULA fill line. Optional: Add 45mL of OXY Boost.</p>	<p>5. Screw the cap back on. Secure tightly.</p>	<p>6. Push clean tank down. Ensure it is seated securely on the base.</p>



***Compatible BISSELL formulas include:** Wash & Protect Pro Stain & Odour, Wash & Protect Pet Stain & Odour, Wash & Protect Stain & Odour, Stain Pretreat, Pet Stain Pretreat, Oxy Boost, Natural Carpet Deep Cleaning Solution, Natural Pet Carpet Deep Cleaning Solution

Cleaning Carpets and Area Rugs




Tips Before Cleaning


- Use a dry vacuum cleaner over area before using your upright carpet cleaner. Remove any large, solid debris before wet cleaning.
- To prevent damage to Berber carpets, avoid repeated strokes in the same area.
- Before cleaning area rugs, check the manufacturer's tag and test an inconspicuous spot on the rug for colorfastness. Don't use on silk or delicate rugs.
- It is common to refill the clean water tank and empty the dirty water tank multiple times during cleaning. Room size and cleaning speed both affect how often the tank may need to be refilled and/or emptied.
- Ensure clean water tank is full. Water might not come out of the nozzle if water level is too low.
- For a quicker dry time, release trigger and make "dry passes" by pushing machine forward and back across carpet until water can no longer be seen through the nozzle.

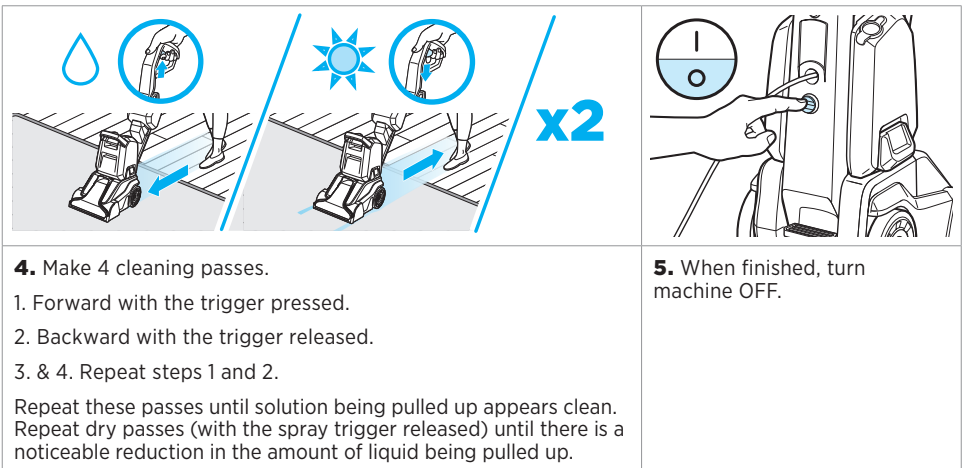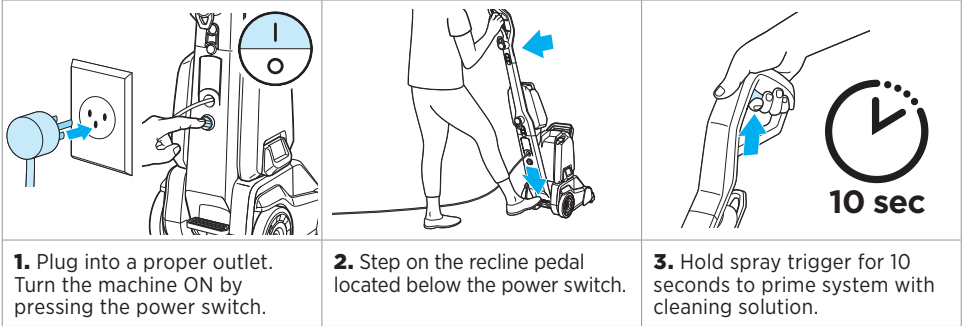


Emptying the Dirty Water Tank

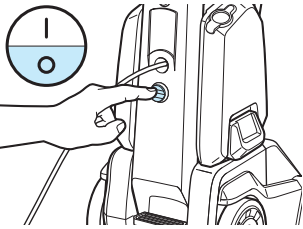


1. Turn OFF and unplug your machine.

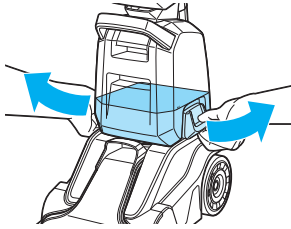


2. Release dirty water tank by pulling the latches on the side up and out.

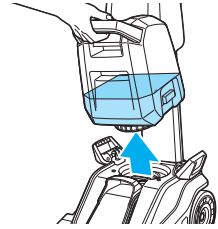


3. Carefully remove tank by lifting up on the dirty water tank handle.

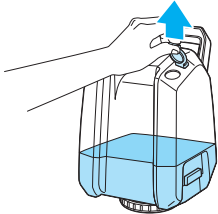

4. Lift tab on the top of the tank to open.

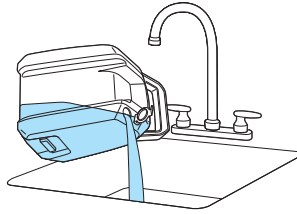


5. Empty the dirty water tank and refill the clean water tank as needed. Changes to motor noise and observed decrease in suction/water reclamation from the floor indicate that the machine's float has engaged. This prevents the dirty water tank from overflowing and leaking, which could harm the motor of the machine. To resolve, remove and empty dirty water tank. If not closed properly, you might experience water leaking, low suction, and/or excessive foaming.

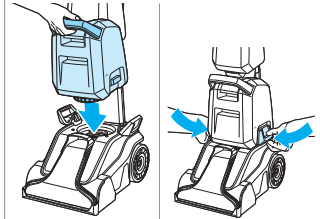


6. To continue cleaning, align the bottom of the tank to the base and secure into place with latches.

⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.


After-Cleaning Care

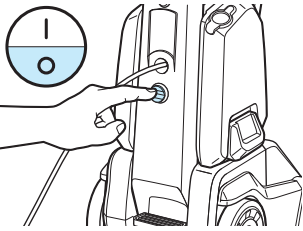


1. Turn OFF and unplug your machine. Follow steps 2-3 on page 6 to remove the dirty water tank.

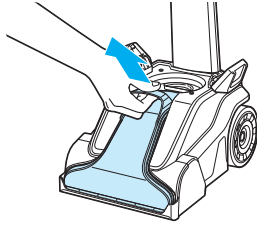


2. Grab the top of the nozzle and pull it up and away from the machine.

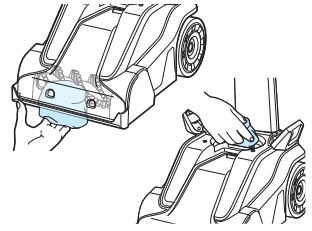


3. Use cloth to wipe clean. Wipe debris from the red filter located beneath where the dirty water tank attaches.

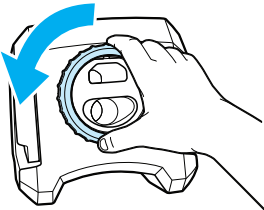


4. Once steps 4-5 on page 6 are complete, ensure the dirty water tank is empty by gently unscrewing and removing the ring at the bottom of the tank.

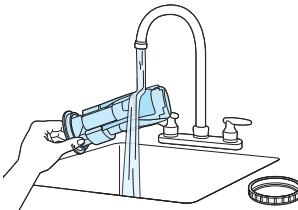


5. Clean and rinse debris from the float. Keeping the float clean prevents the dirty water tank from overflowing and ensures the seal stays intact.

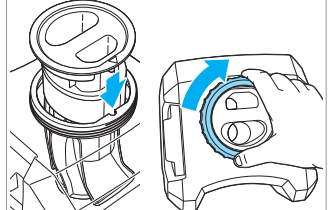


6. Once clean, assemble by aligning the arrow on the float with the notch on the tank. Then, return the ring and twist to lock. Make sure it's fully aligned, so water doesn't leak.

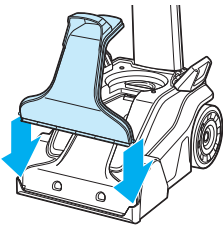

7. To reinstall the nozzle, align the ribs on the ends of the nozzle to the machine, then lower the nozzle into place.

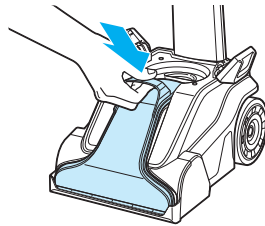


8. With the bottom of the nozzle in place, lower the top of the nozzle onto the machine, ensuring it fits snugly.

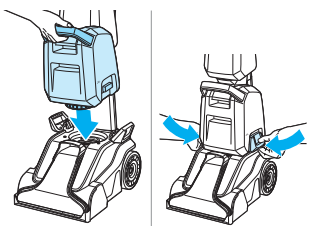


9. Once dirty water tank is dry, align the bottom of the tank to the base and secure into place with latches.

⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.


Replacing the Belt & Brush Roll

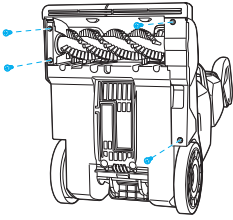


1. Turn OFF and unplug your machine. Use a Phillips-head screwdriver to remove the 4 screws.

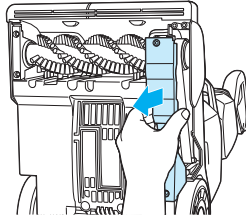


2. Remove belt cover.

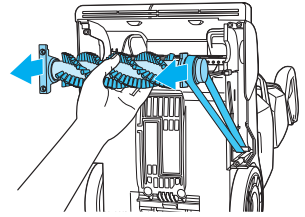


3. Pull brush roll out and remove belt from track.

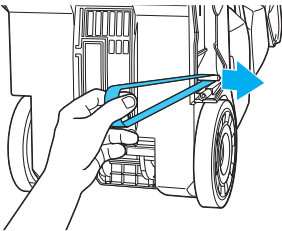


4. Pull belt off of motor shaft.

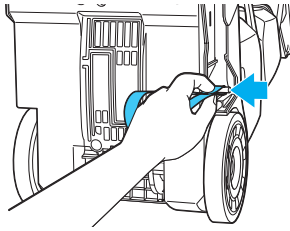


5. Wrap new belt around motor shaft.

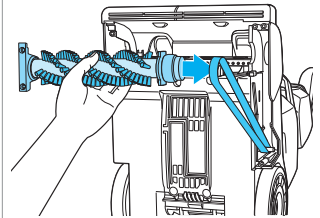


6. Put the belt on the brush roll track, ensuring it is centered within the ridges. Put the brush roll back into position.

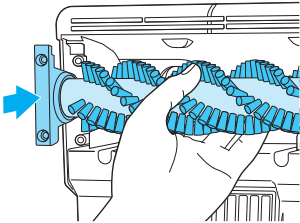

7. Align brush roll mount to screw post.

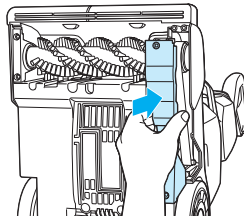

8. Reposition belt cover.

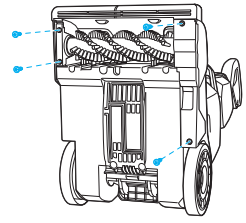

9. Reinstall 4 screws.

Note: Other maintenance or service not included in this manual should be performed by an authorized service representative.

⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.


Storing Your Machine



Store your machine in a protected, dry area. When finished using the product, wrap cord around cord wrap for storage.

NOTICE: To reduce the risk of a leaking condition, do not store machine where freezing may occur. Damage to internal components may result.

Troubleshooting

 Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.BISSELL.co.uk.



Problem	Possible Cause	Remedies
Reduced spray OR no spray	Clean water tank may be empty.	Refill tank.
	Clean water tank may not be seated completely.	Turn power off. Remove and reseal tank.
	Water level of clean water tank may be too low.	Refill tank.
Loss of suction power	Dirty water tank may not be seated properly.	Reseat dirty water tank so it fits properly.
	Dirty water tank is full.	Empty dirty water tank.
	Rubber tab on dirty water tank is not sealed tight.	Check rubber tab on dirty water tank and press firmly on all edges to secure tightly.
	Nozzle not installed correctly.	Remove and reinstall nozzle.
No power	Outlet may not be active.	Try plugging in a different device that uses a grounded outlet to test for power from outlet.
Leaking dirty water tank	Tank ring not installed properly.	Remove tank. Remove and reinstall tank ring.
	Dirty water tank is full.	Empty dirty water tank
	Dirty water tank is damaged.	Contact BISSELL Consumer Care.
Brush roll not turning	Broken or damaged belt.	Replace belt by following steps on page 8.
	Seized brush roll.	Turn off and unplug the machine. Remove the belt. Test brush roll by spinning it manually. If it does not spin freely, replace with a new one.

Limited Warranty

This limited warranty only applies outside of the USA, Canada, Australia, New Zealand, and mainland China. It is provided by BISSELL International Trading Company B.V. ("BISSELL") and gives you specific rights. It is offered as an additional benefit to your other rights under your local laws, which may vary from country to country. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this warranty will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor.

This warranty is given to the current owner of the product with the original sales receipt. The original sales receipt must include the product(s) purchased, the date purchased, and which country it was purchased from new. You must be able to evidence the date of purchase and the country where the product was purchased to submit a claim under this warranty. You will receive the warranty that is applicable to the country where your product was originally purchased, as shown on the original sales receipt. If you use the product outside of the country where it was purchased, your warranty may be void in BISSELL's sole discretion. It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill the terms of this warranty. Any personal data will be handled pursuant to BISSELL's Privacy Policy, which can be found at global.BISSELL.com/privacy-policy.

Limited Two-Year Warranty

For two years from the date of purchase by the original purchaser, subject to the EXCEPTIONS AND EXCLUSIONS* identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge, any defective or malfunctioning part or product.

BISSELL recommends that the original packaging and original proof of purchase with the date of purchase and country where purchased be kept for the duration of the warranty period in case you want to redeem the warranty during the warranty period. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the warranty.

If your product is replaced by BISSELL under this warranty, then the new item will benefit from the remainder of the term of this warranty (calculated from the date of the original purchase). The period of this warranty shall not be extended whether or not your product is repaired or replaced.

*Exceptions and Exclusions from the Terms of the Warranty

This warranty applies to products used for personal domestic use and not commercial or hire purposes. Consumable components and attachments such as filters, belts, shells, water tanks, scraping strips, brushes, and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this warranty. This warranty does not apply to any defect arising from fair wear and tear, including but not limited to the battery discharging time shortening due to the aging or use. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the user guide is not covered by this warranty. An unauthorised repair (or attempted repair) may void this warranty whether or not damage has been caused by that repair/attempt. Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this warranty.

Except as set out below, BISSELL and its distributors are not liable for any loss or damage that is not foreseeable or for incidental or consequential damages of any nature associated with the use of this product including without limitation loss of profit, loss of business, business interruption, loss of opportunity, distress, inconvenience, or disappointment. Except as set out below, BISSELL's liability will not exceed the purchase price of the product.

BISSELL does not exclude or limit in any way its liability for (a) death or personal injury caused by our negligence or the negligence of our employees, agents or subcontractors; (b) fraud or fraudulent misrepresentation; (c) or for any other matter which cannot be excluded or limited under law.

Important Notes

- If your BISSELL product should require service or to claim under our limited warranty, please visit support.BISSELL.co.uk.
- Please keep your original sales receipt. It provides proof of the date of purchase and where it was purchased in the event of a warranty claim. See warranty for details.
- Please note that using your BISSELL machine outside of its country of original purchase and/or use with a power converter may damage your BISSELL machine and damage caused by mismatched power voltage will not be covered by your warranty.
- Please note that putting vinegar, bleach, dish soap, detergent, homemade soap, and other non-BISSELL products in your BISSELL machine may damage your BISSELL machine. Damage caused by using non-BISSELL products in your machine will not be covered by your warranty.



©2025 BISSELL, Inc. All rights reserved.
Part Number 1642607 11/24 v5