

KÄRCHER

makes a difference

LMO 18-36 Battery

English
العربية

7
12





Register
your product
www.kaercher.com/welcome



















EAC












59693090 (07/20)

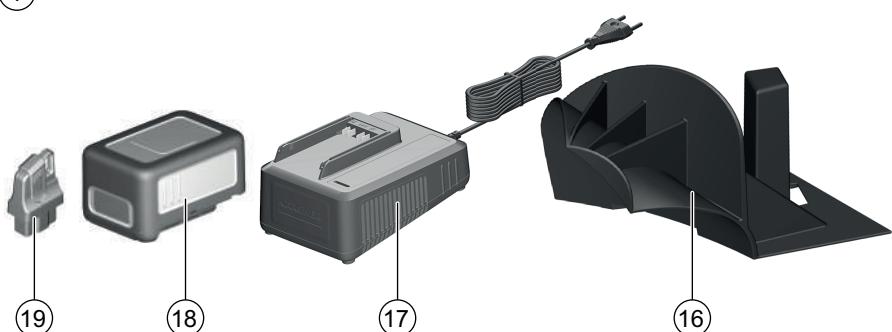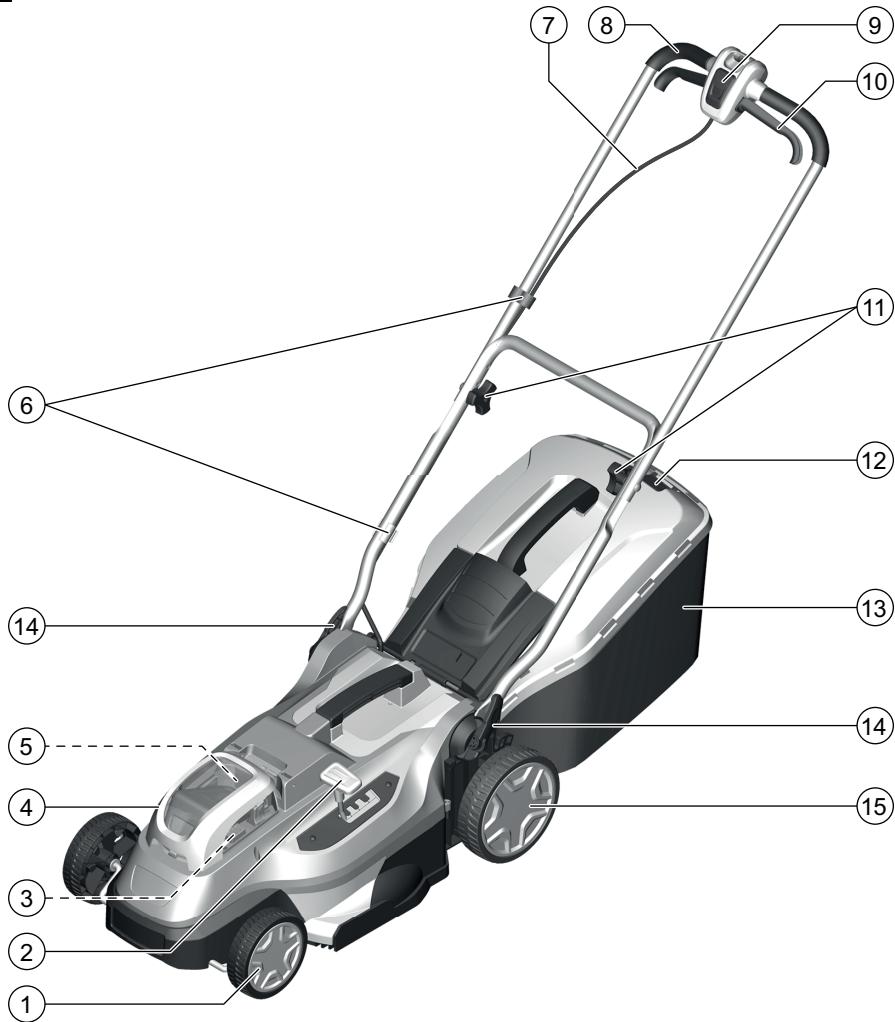A

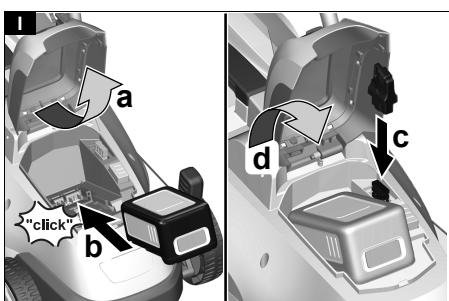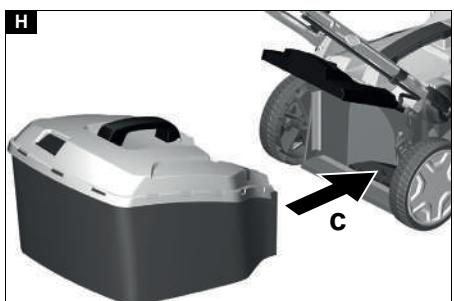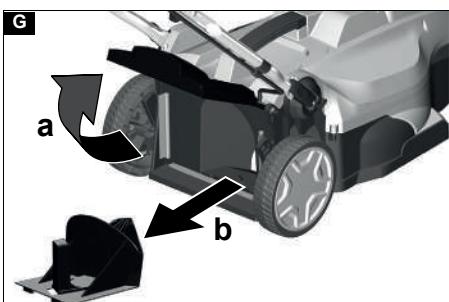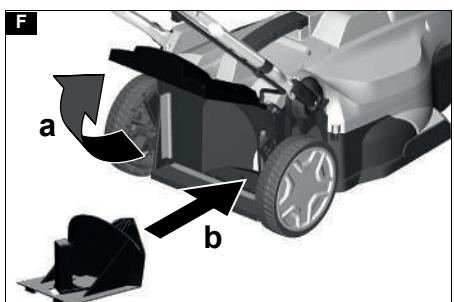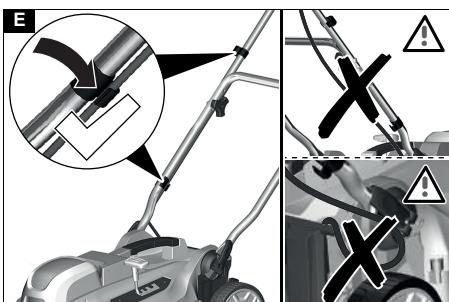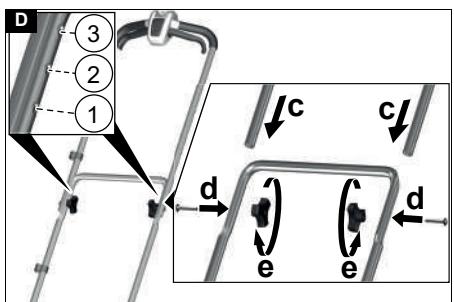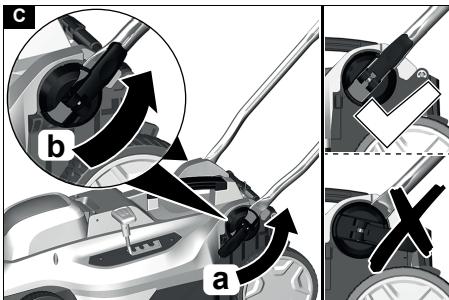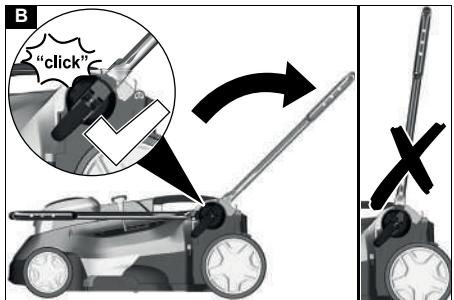

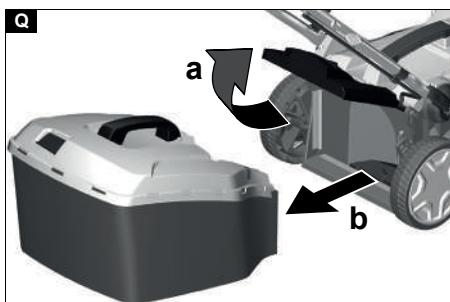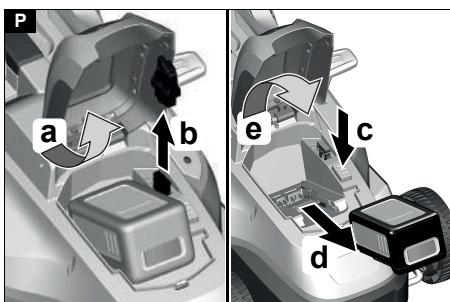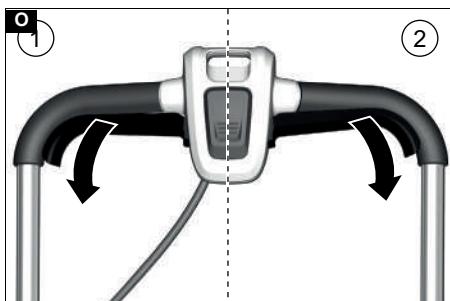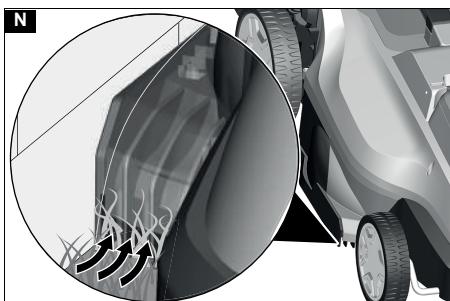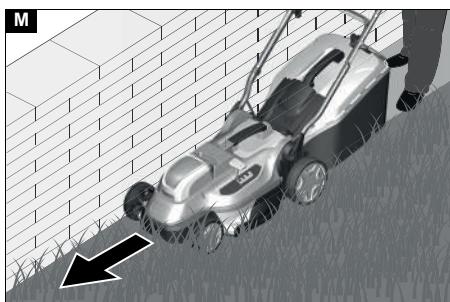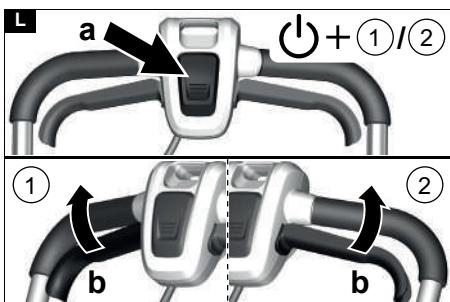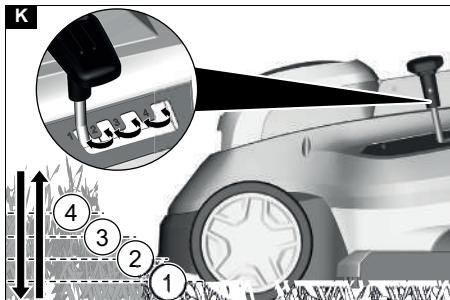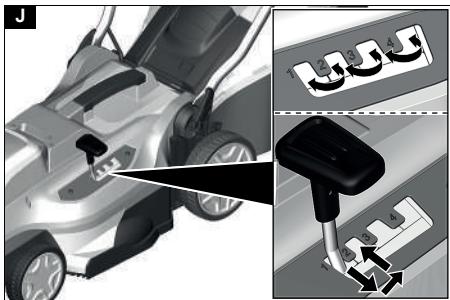

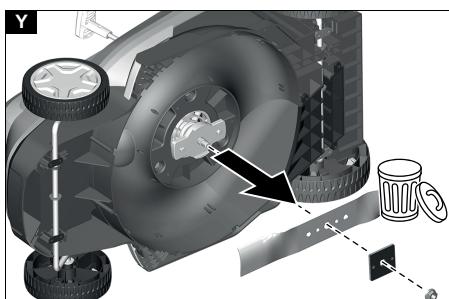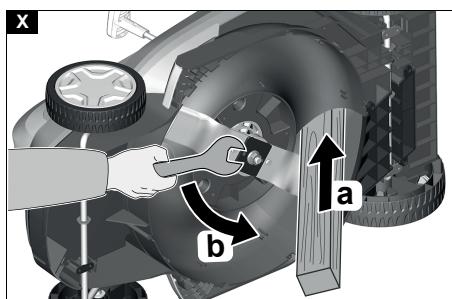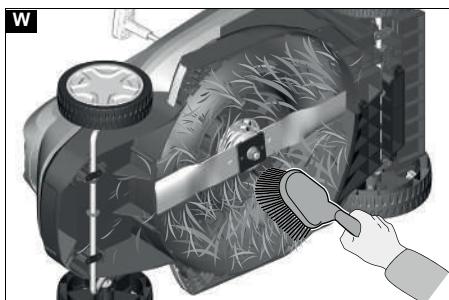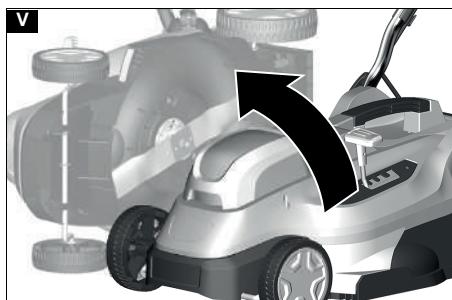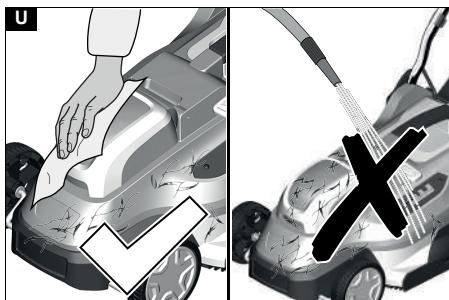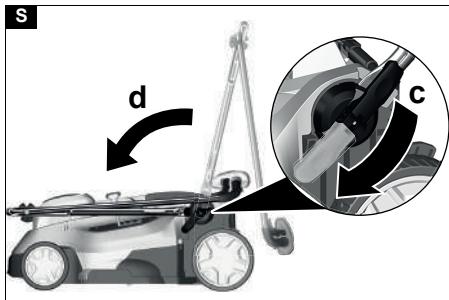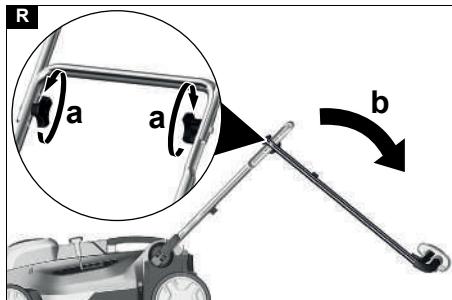

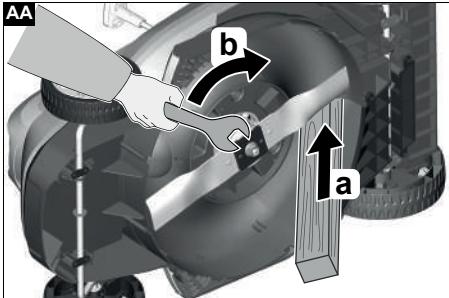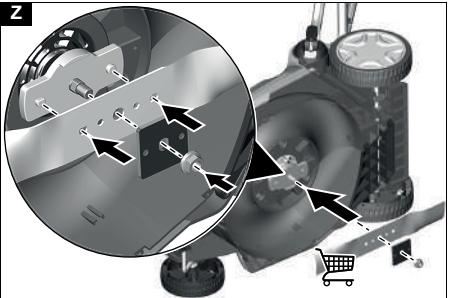

Contents

Safety instructions	7
Intended use.....	8
Environmental protection.....	8
Accessories and spare parts	8
Scope of delivery	8
Safety devices	9
Device description	9
Installation	9
Initial startup	9
Operation.....	9
Transport	10
Storage	10
Care and service	10
Troubleshooting guide	11
Technical data	11
Warranty	11
EU Declaration of Conformity	11

clothing with long arms and non-slip boots when working with the device. Do not work barefoot. Do not wear sandals or short trousers. Avoid wearing loose clothing or clothing with cords and straps. • Wear protective goggles or safety goggles with side protection. • Always guide the device along the face of a gradient. Danger of severe injuries when you guide the device up and down a gradient. • Do not run but rather walk when working with the device. Maintain a solid and safe footing and keep your balance, especially when working on gradients. • Danger of accident due to slipping. Do not use the device at the edges of steep slopes or trenches, on steep slopes or embankments.

⚠ CAUTION • Familiarise yourself with the controls and the correct use of the device.

Occupational safety

⚠ DANGER • Severe injuries when objects are flung by the cutting blade or when the cutting tool becomes entangled in wires or cords. Inspect the work area thoroughly for objects such as stones, sticks, metal, wires, bones or toys and remove these before using the device. • Never use the device when persons, especially children, are within a radius of 15 m of the working area, because the danger exists of objects being flung out by the cutting blade. • Danger of explosion. The device creates sparks that may ignite dust, gas or vapours. Do not operate the device in explosive atmospheres, such as in the presence of flammable liquids, gases or dusts. • Severe accidents with children. Children can be attracted by the device and your activities. Keep an eye on children because they do not always remain where you have last seen them.

⚠ WARNING • Do not operate the device on wet grass or in the rain. • Do not use the device if there is a danger of lightning. • Always mow in daylight or under good artificial lighting. • Keep children away from the mowing area and have them supervised by an adult who is not the operator; be alert and switch the device off if a child enters the mowing area. • Be careful when approaching blind corners, bushes, trees or objects that might restrict your view.

ATTENTION • The device operator is responsible for accidents with other people and their property.

Safe operation

⚠ DANGER • Check that the blade, blade bolts and blade unit are undamaged each time before using the device. • Never lock the On/Off switch in the ON position, this is extremely dangerous. • Pull the device backwards only when absolutely necessary. If you need to pull the device away from a wall or obstacle, first pull downwards to prevent yourself from stumbling or pulling the device over your feet. • Danger of coming into contact with the open blade or being hit by flung objects. Do not tip the device when starting the motor or while the motor is running. If tipping is absolutely necessary, e.g. to make starting easier, then you can raise the front of the device by 5 cm. Press the handle carefully downwards for this. You must return the device to the normal operating position (i.e. all four wheels on the ground) before starting to mow. • Knives that come into contact with a live cable may energize exposed metal parts of the device and cause an electric shock.

⚠ WARNING • The blades on the device are sharp. Wear sturdy protective gloves and work carefully

Safety instructions



Read these safety instructions, these original instructions, the safety instructions provided with the battery pack and the operating instructions supplied with the battery pack/standard charger before using the device for the first time. Proceed accordingly. Keep the booklets for future reference or for future owners.

In addition to the notes in the operating instructions, you also need to take into consideration the general safety regulations and accident prevention guidelines applicable by law.

Hazard levels

⚠ DANGER

- Indication of an imminent threat of danger that will lead to severe injuries or even death.

⚠ WARNING

- Indication of a potentially dangerous situation that may lead to severe injuries or even death.

⚠ CAUTION

- Indication of a potentially dangerous situation that may lead to minor injuries.

ATTENTION

- Indication of a potentially dangerous situation that may lead to damage to property.

General safety instructions

⚠ DANGER • The device can amputate hands and feet, causing death or severe personal injury, and can fling objects unpredictably. • Severe injuries through a lack of concentration when working. Do not use the device when under the influence of drugs, alcohol, or medication, or when you are tired.

⚠ WARNING • Children and persons unfamiliar with these instructions are not allowed to operate the device. The age of the operator may be limited by local restrictions. • Children must not play with the appliance. • Children must be supervised to prevent them from playing with the appliance. • Use only the battery pack specified in these operating instructions with the device. Observe the basic precautionary measures when using battery operated devices, to reduce the risk of injuries, fire and a leaking battery. • Wear long, heavy trousers,

when installing, replacing, cleaning or checking the seating of screws. • Replace worn or damage parts as a complete set to maintain the correct balance. • Ensure that the device is in a safe condition by regularly checking that all bolts, nuts and screws are screwed tight. • Replace any worn or damaged parts before operating the device. • Never use the device if the on/off switch on the handle does not switch on and off correctly. • Do not forcefully operate the device. • Stop the motor, in order to stop the blade when transporting the device to and from the mowing area or when tipping the device for crossing ground that is not covered with grass. • Stop the blade before crossing gravel surfaces. • Never use the device with defective or absent protective devices, such as e.g. deflectors and/or the grass catcher. • Do not bring your hands or feet in the vicinity of, or underneath rotating parts. Switch the motor on according to the operating instructions. • Never lift or carry the device while the motor is running. • Uneven terrain carries an increased risk of slipping and accidents. Avoid holes, furrows, uneven areas, stones and other hidden objects. • Start the device only when you are positioned in the safe area behind the handle.

- All four wheels are on the ground.
- The grass ejection chute is not open but rather protected by the grass catcher or the ejection chute cover.
- The hands and feet of all persons are away from the cutting housing.
- Switch the motor off and remove the safety key. Ensure that all moving parts have completely stopped moving:
- Always when you leave the device unattended, including the periods when disposing of the mown grass.
- Before removing a blockage or cleaning the ejection chute.
- Before checking, cleaning or working on the device.
- After hitting a foreign object. First check the device for damage and repair any damage before restarting the device.
- Before removing the grass catcher or the grass ejection chute cover.
- When the device starts to vibrate unusually. Immediately check the device:
 - For loose parts. Tighten any loose parts if necessary.
 - For damage, especially to the blade. Repair or replace any damaged parts.

⚠ CAUTION • Check the grass catcher regularly for wear and tear.

ATTENTION • Take care to ensure that the motor control cable is not jammed or damaged in any other way during installation or when folding the handle.

Residual risks

⚠ WARNING

- Certain residual risks remain present, even when the device is operated in the prescribed manner. The following dangers can be present when using the device:
 - Vibration can cause injuries. Use the correct tools for the job, use the handles provided and restrict the working time and hazard exposure time.
 - Noise can cause hearing injuries. Wear hearing protection and limit the duration of exposure.
 - Injuries through contact with the blades.

- Injuries due to flung objects.

Risk reduction

⚠ CAUTION

- Using the device for longer periods can cause poor circulation in the hands due to vibrations. A general period of use cannot be set, because this depends on several influencing factors:
- Personal tendency to suffer from poor circulation (frequently cold fingers, tingling sensation in the fingers)
- Low ambient temperature. Wear warm gloves to protect your hands.
- Holding the device too tightly hindering blood circulation.
- Continuous operation is more harmful than operation interrupted by work breaks.
You should see a doctor if using the device regularly and for lengthy periods of time, and in the event of repeated occurrences of symptoms such as tingling in the fingers or cold fingers.

Intended use

⚠ DANGER

Improper use

Danger of death from incision injuries

Only use the device for its proper use.

- Use the battery lawnmower in private households only.
- The device is intended for outdoor use only.
- The device is designed for mowing private lawns.
- The device is designed for being pushed by hand. The device should not be pulled.
- Riding on the device is prohibited.

Any other use is prohibited. The user carries full liability for damage resulting from improper use.

Environmental protection

 The packing materials can be recycled. Please dispose of packaging in accordance with the environmental regulations.

 Electrical and electronic appliances contain valuable, recyclable materials and often components such as batteries, rechargeable batteries or oil, which - if handled or disposed of incorrectly - can pose a potential threat to human health and the environment. However, these components are required for the correct operation of the appliance. Appliances marked by this symbol are not allowed to be disposed of together with the household rubbish.

Notes on the content materials (REACH)

Current information on content materials can be found at: www.kaercher.com/REACH

Accessories and spare parts

Only use original accessories and original spare parts. They ensure that the appliance will run fault-free and safely.

Information on accessories and spare parts can be found at www.kaercher.com.

Scope of delivery

The scope of delivery for the appliance is shown on the packaging. Check the contents for completeness when unpacking. If any accessories are missing or in the event of any shipping damage, please notify your dealer.

Safety devices

Symbols on the device



Follow all warning notices and safety instructions. Read and comprehend all instructions before using the product.

Watch out for flung or flying objects.



Keep all spectators, especially children and pets, at least 15 m away from the work area.



Watch out for the sharp blade. The blades continue rotating after the motor has been switched off.



Remove the safety key before performing any maintenance.



Wear suitable eye protection and hearing protection when performing work.



Do not work on steep slopes.



Do not subject the device to rain or moist conditions.



Overload protection

The device is equipped with an overload protection system. The device switches off automatically when an overload is detected.

Device description

The maximum amount of equipment is described in these operating instructions. Depending on the model used, there are differences in the scope of delivery (see packaging).

For the illustrations, refer to the graphics page.

Illustration A

- ① Front wheel
- ② Cutting height adjustment lever
- ③ Battery pack release
- ④ Battery flap
- ⑤ Type plate
- ⑥ Cable holder
- ⑦ Motor control cable
- ⑧ Handle
- ⑨ Starter button
- ⑩ ON/OFF switch
- ⑪ Quick-release screw
- ⑫ Grass catcher filling level indicator
- ⑬ Grass catcher

⑭ Quick-release catch

⑮ Rear wheel

⑯ Mulch plug

⑰ *Charger

⑱ *Rechargeable battery pack

⑲ Safety key

* optional

Rechargeable battery pack

The device can be operated with a 18V Kärcher Battery Power battery pack.

Installation

Installing the handle

1. Fold over the lower section of the handle.
Illustration B
2. Lock the handle with the quick-release catch.
Illustration C
3. Screw the upper section of the handle at the desired height.
Illustration D
4. Fasten the motor control cable using the cable holder.
Illustration E

Initial startup

Attaching the mulch plug

The mulch plug is used when the mown grass is to remain on the lawn.

1. Open the ejection chute flap.
Illustration F
2. Insert the mulch plug into the ejection chute.
3. Close the ejection chute flap.

Installing the grass catcher

The grass catcher is used when the mown grass is to be collected for disposal.

1. Open the ejection chute flap.
Illustration G
2. Remove the mulch plug.
3. Install the grass catcher on the ejection chute. Take care to ensure that the ejection chute flap locks the grass catcher in place.
Illustration H

Installing the battery pack

1. Open the battery flap.
Illustration I
2. Push the battery pack into the mounting in the device until it audibly latches into place.
3. Insert the safety key.
4. Close the battery flap.

Operation

General information on handling the lawnmower

The run time of the battery depends on several factors:

- The condition, length and density of the grass
- The cutting height setting

The maximum surface performance, depending on the state of the grass, with a 5 Ah battery pack:
approx. 350 m².

The results of the mowing process can be optimised as follows:

- Cut at a maximum of one third of the grass height.
- Reduce the speed at which push the device when mowing tall grass.

Note

Do not mow wet grass. Wet grass sticks to the underside of the lawnmower and prevents correct collection of the grass in the grass catcher or ejection of the grass.

Mowing lawns

⚠ WARNING

Lifting or tipping the lawnmower during operation

Incision injuries

The blade of the lawnmower rotates approximately parallel to the ground over which it moves. Take care to ensure that all four wheels touch the ground when mowing.

1. Install the grass catcher or mulch plug (see Chapter *Initial startup*).
2. Set the cutting height using the cutting height adjustment lever.

Illustration J

Choose the cutting height according to the condition, length and density of the grass (see Chapter *General information on handling the lawnmower*).

Illustration K

3. Press the start button and the ON/OFF switch.

Illustration L

The device starts.

4. Release the start button and hold the ON/OFF button pressed.

Empty the grass catcher regularly when using the grass catcher, otherwise the ejection chute can become clogged with cut grass (see Chapter *Emptying the grass catcher*).

Mowing edges

Lawn edges, e.g. along a wall, can also be mown using the device.

1. Push the lawnmower along the wall, close to the wall.

Illustration M

The side inlet ensures that the grass is pulled into the cutting zone.

Illustration N

Finishing operation

1. Release the ON/OFF switch.

Illustration O

The motor stops.

Removing the battery pack

1. Open the battery flap.

Illustration P

2. Remove the safety key.

3. Press the battery pack release.

4. Remove the battery pack.

5. Close the battery flap.

Emptying the grass catcher

The flap on the grass catcher filling lever indicator closes when the grass catcher is full. Empty the grass catcher in this case.

1. Lift the ejection chute flap.

Illustration Q

2. Remove the grass catcher.

Take care to ensure that the motor control cable remains in the cable holder when removing the grass catcher.

3. Empty the grass catcher.

Transport

⚠ WARNING

Sharp blade

Incision injuries

Be careful when tipping or lifting the device.

Keep all parts of your body away from the cutting blade.

1. Switch the device off (see Chapter *Finishing operation*).
2. Ensure that the blade is no longer rotating.
3. Allow the device to cool down.
4. Remove the safety key (see Chapter *Removing the battery pack*).
5. Remove the battery pack.
6. Secure the device against slipping and tipping over when transporting in vehicles.

Storage

Clean the device before storing (see Chapter).

1. Release the quick-release screws and fold down the handle.

Illustration R

2. Fold over the quick-release catch and place the handle on the device.

Illustration S

3. Place the grass catcher on the handle and the device.

Illustration T

4. Store the device in a dry, well ventilated location. Keep away from corrosive substances such as garden chemicals and defrosting salt. Do not store the device outdoors.

Care and service

⚠ WARNING

Sharp blade

Incision injuries

Be careful when tipping or lifting the device.

Keep all parts of your body away from the cutting blade.

Cleaning the device

1. Remove the battery pack (see Chapter *Removing the battery pack*).

2. Clean the exterior of the device with a soft, damp cloth or brush each time after use.

Illustration U

Clean the blade before longer storage periods.

3. Tip the device onto the side.

Illustration V

4. Clean the blade and the underside of the device using a brush.

Illustration W

Removing blockages

⚠ WARNING

Removing blockages

Incision injuries from the sharp blade or sharp-edged objects

Wear protective gloves when checking for blockages or removing blockages.

1. Switch the device off and wait until the blade comes to a standstill.

- Remove the battery pack (see Chapter *Removing the battery pack*).
- Remove the grass catcher and check for blockages. Remove any blockages.
- Check the ejection shaft for blockages. Remove any blockages.
- Tip the device onto the side.
- Check the underside of the device and the blade for blockages. Be careful when removing blockages because the blade can move while doing this.

Replacing the blade

- Remove the battery pack (see Chapter *Removing the battery pack*).
- Clean the underside of the device (see Chapter).
- Lock the blade and then loosen the screw.
Illustration X
- Remove and dispose of the blade.
Illustration Y
- Fit the new blade into the holder.
Illustration Z
- Lock the blade and then tighten the screw.
Illustration AA

Troubleshooting guide

Malfunctions often have simple causes that you can remedy yourself using the following overview. When in doubt, or in the case of malfunctions not mentioned here, please contact your authorised Customer Service.

The device switches off

The device overload protection system has triggered.

- Release the ON/OFF switch.
- Press the start button and the ON/OFF switch.

The battery pack overheating protection has triggered.

- Wait until the battery pack temperature lies within the normal range.
- Charge the battery pack if the device cannot be switched on.

Technical data

LMO 18-36

Device performance data

Nominal voltage	V	18
Cutting width	cm	36
Cutting height	mm	30-70
Grass catcher volume	l	45
Idle speed	1/min	4000 ± 10%

Determined values in acc. with EN 60335-2-77

Sound pressure level L _{pA}	dB(A)	78
Uncertainty K _{pA}	dB(A)	3
Sound power level L _{WA} + K uncertainty _{WA}	dB(A)	94
Right handle hand-arm vibration value	m/s ²	0,5

Left handle hand-arm vibration value	m/s ²	1,4
Uncertainty K	m/s ²	1,5

Dimensions and weights

		LMO 18-36
Length x width x height	mm	1309 x 398 x 1042
Weight (without battery pack)	kg	13,4

Subject to technical modifications.

Warranty

The warranty conditions issued by our relevant sales company apply in all countries. We shall remedy possible malfunctions on your appliance within the warranty period free of cost, provided that a material or manufacturing defect is the cause. In a warranty case, please contact your dealer (with the purchase receipt) or the next authorised customer service site. (See overleaf for the address)

EU Declaration of Conformity

We hereby declare that the machine described below complies with the relevant basic safety and health requirements in the EU Directives, both in its basic design and construction as well as in the version placed in circulation by us. This declaration is invalidated by any changes made to the machine that are not approved by us.

Product: Battery-operated lawnmower

Type: LMO 18-36 Battery 1.444-4xx.0

Currently applicable EU Directives

2000/14/EC (+2005/88/EC)

2014/30/EU

2006/42/EC (+2009/127/EC)

2011/65/EU

Harmonised standards used

EN 50581: 2012

EN 55014-1: 2017

EN 55014-2: 2015

EN 60335-1:2012+A11:2014+A13:2017

EN 60335-2-77:2010

EN 62233: 2008

Conformity evaluation procedure used

2000/14/EC and amended by 2005/88/EC: Annex VI

Sound power level dB(A)

Measured: 91,0

Guaranteed: 94

Name and address of the notified body involved

Société Nationale de Certification et d'Homologation

2a. Kalchesbrück

L-1852 Luxembourg

ID no. 0499

The signatories act on behalf of and with the authority of the company management.

H. Jenner

Chairman of the Board of Management

S. Reiser

Director Regulatory Affairs & Certification

Documentation supervisor: S. Reiser

Alfred Kärcher SE & Co. KG

Alfred-Kärcher-Str. 28 - 40

71364 Winnenden (Germany)

Ph.: +49 7195 14-0

Fax: +49 7195 14-2212

Winnenden, 2018-11-01

4. إزالة علبة البطارية.
5. غلق غطاء البطارية.

تغريغ سلة جمع العشب

إذا امتهنت سلة جمع العشب، يتم إغلاق غطاء باب مؤشر ملء سلة جمع العشب. في هذه الحالة يجب تغريغ سلة جمع العشب.

- رفع غطاء فتحة الإخراج.
- صورة إيضاحية Q**
إزالة سلة جمع العشب.
- عند إزالة سلة جمع العشب، يجب الحرص على أن يبقى كابل التحكم بالمحرك موجوداً في حامل الكابل.
- تغريغ سلة جمع العشب.

النقط

△ تحذير

شفرة حادة

اصبات بجروح
كن خرداً عند إزالة الجهاز أو عند رفعه.

- بعد جمع أحجزاء الجسم عن الشفرة.

1. إذا كان من الشفرة متوقفة ولا تدور.

2. انزل الجهاز بيبرد.

3. إزالة مفتاح الأمان (انظر الفصل إزالة علبة البطارية).

4. إزالة علبة البطارية.

5. يجب تأمين الجهاز ضد الانزلاق والانقلاب عند نقله في المركبات.

التخزين

يجب تنظيف الجهاز كل تخزين (انظر الفصل).
1. حل براغي القفل السريع وطي المقاييس.

R صورة إيضاحية

طي السدادات السريعة ووضع المقاييس على الجهاز.

S صورة إيضاحية

وضع سلة جمع العشب على المقاييس وعلى الجهاز.

T صورة إيضاحية

تخزين الجهاز في مكان جاف وذو تهوية جيدة. بعد الجهاز عن المواد المسية للتأكل مثل المواد الكيميائية للحدائق. عدم تخزين الجهاز في الهواء الطلق.

العناية والصيانة

△ تحذير

شفرة حادة

اصبات بجروح
كن خرداً عند إزالة الجهاز أو عند رفعه.

- بعد جمع أحجزاء الجسم عن الشفرة.

تنظيف الجهاز

- إزالة علبة البطارية (انظر الفصل إزالة علبة البطارية).
- يجب بعد كل استخدام تنظيف الأسطح الخارجية للجهاز باستخدام قطعة قماش ناعمة وجافة أو استخدام فرشاة للتنظيف.

صورة إيضاحية U

تنظيف الشفرة قبل التخزين لمدة طويلة.

3. إزالة الجهاز على الجانب.

V صورة إيضاحية

4. تنظيف الشفرة والجهة السفلية للجهاز باستخدام فرشاة.

W صورة إيضاحية

إزالة الانسدادات

△ تحذير

إزالة الانسدادات

اصباب بجروح عن طريق شفرة حادة أو أشياء ذات حواف حادة

أزيد من فحارات واقفة إذا قمت بفحص الانسدادات أو زراعة.

1. يجب إيقاف الجهاز والانتظار حتى تتوقف الشفرة تماماً.

2. إزالة علبة البطارية (انظر الفصل إزالة علبة البطارية).

3. إزالة سلة جمع العشب وفحص الانسدادات. إزالة الانسدادات إذا لزم الأمر.

4. التتحقق من عدم وجود انسدادات في فتحة الإخراج. إزالة الانسدادات إذا لزم الأمر.

5. إزالة الجهاز على الجانب.
التحقق من عدم وجود انسدادات على الجهة السفلية للجهاز والشفرة. إزالة الانسدادات بحذر لأن الشفرة يمكن أن تتحرك أثناء العملية.

استبدال الشفرة

1. إزالة علبة البطارية (انظر الفصل إزالة علبة البطارية).

2. تنظيف الشفرة السفلية للجهاز (انظر الفصل).

3. ثبيت الشفرة وحل البرغي.

X صورة إيضاحية

4. إزالة الشفرة والتخلص منها.

Y صورة إيضاحية

5. تركيب الشفرة الجديدة في الحامل.

Z صورة إيضاحية

6. ثبيت الشفرة وشد البرغي.

AA صورة إيضاحية

مساعدة في حالة حدوث أعطال

في الغالب تكون لاختلالات أسباب بسيطة يمكنك التغلب عليها ببساطة بالاستعاة بالعرض العام التالي. في حالات الشك أو عند حدوث اختلالات غير مذكورة هنا فيرجى التوجه إلى خدمة العملاء المعتمدة.

الجهاز يتوقف

تم إطلاق الحماية من الجمولة الزائدة للجهاز.

1. ترك الضغط على مفتاح تشغيل/إيقاف.

2. التضغط على مفتاح بدء التشغيل ومفتاح التشغيل/إيقاف.

تم إطلاق الحماية من السخونة المفترضة لعلبة البطارية.

1. يجب الانتظار حتى تصبح درجة الحرارة لعلبة البطارية في النطاق الطبيعي.

2. إذا تعدد تشغيل الجهاز، يجب شحن علبة البطارية.

بيانات الفنية

LMO 18-36

أداء الجهاز

18 V

جهد إسمى

36 cm

عرض الفص

30-70 mm

ارتفاع الفص

45 I

حجم سلة جمع العشب

± 4000 1/min

سرعة دوران الأхامل

10%

ساعة

EN 60335-2-77 القيم المسجلة وفقاً للمواصفة

78 dB(A)

مستوى أبعاد الصوت L_{WA}

3 dB(A)

قيمة الشك K_{WA}

94 dB(A)

مستوى قدرة الصوت + قيمة

الشك K_{WA}

قيمة اهتزاز الذراع - اليد بالمقياس الآمن

0,5 m/s²

m/s²

قيمة اهتزاز الذراع - اليد بالمقياس الآيسير

1,4 m/s²

m/s²

1,5 m/s²

قيمة الشك K

البعاد الوزن

1309 mm

الطول × العرض × الارتفاع

x 398

x 1042

13,4 kg

وزن (بدون علبة بطارية)

المواصفات الفنية خاضعة للتعديل.

الضمان

يسري في كل دولة شروط الضمان التي تتبعها شركة التسويق المتخصصة التابعة لنا. نحن نتولى إصلاح الأخطاء التي قد تطرأ على جهازك خلال فترة الضمان بدون مقابل. عندما يكون سبب هذه الأعطال ناجم عن عيب في المواد المستخدمة أو في عملية التصنيع. في حالة استحقاق الضمان، توجه من فضلك بقسمية الشراء إلى أقرب موزع أو مركز خدمة عملاء معتمد. (العنوان على الصفحة الخلفية)

العربية

15

3. تركيب سلة جمع العشب بفتحة الإخراج. لذلك تأكد من أن غطاء فتحة الإخراج تغلى سلة جمع العشب.

صورة إيضاحية H

تركيب علبة البطارية

1. فتح غطاء علبة البطارية.

صورة إيضاحية I

- ادفع البطارية في مسيتها بالجهاز حتى شت بصوت مسموع.
- إدخال مفتاح الأمان.
- غلق غطاء البطارية.

التشغيل

إرشادات عامة حول التعامل مع جزارة العشب

تعتمد فترة تشغيل البطارية بعدة عوامل:

- من حالة، طول وكافية العشب
- من ارتفاع القص المضبوط قدرة قصوى للمساحة، اعتماداً على حالة العشب على بطارية 5 أمبير ساعة: حوالي 350 م².
- يمكن تحسين نتيجة عملية جز العشب كالتالي:
 - قص ثلث ارتفاع العشب كحد أقصى.
 - عند جز العشب الطويل، ينبغي تقليل السرعة التي يتم فيها دفع الجهاز.

ارشاد

لا تجر العشب الرطب. العشب الرطب يظل ملتصقاً بالجهة السفلية لجزارة العشب ولا يمكن جمعه في سلة جمع العشب أو قذف القصاصات بشكل جيد.

جز العشب

٤ تحذير

رفع أو إمالة جزارة العشب أثناء التشغيل

اصبات بجريح

تثور شفرة جزارة العشب بالبطارية بشكل متوازي على الأرض التي تتحرك فوقها. احرص على أن تكون جميع العجلات الاربعة ملائمة للأرض عند جز العشب.

1. تركيب سلة جمع العشب أو إسفين المهداد (انظر الفصل بدء التشغيل).

2. ضبط ارتفاع القص باستخدام دراع تعديل ارتفاع القص.

صورة إيضاحية L

يعتمد ارتفاع القص على حالة وطول وكافية العشب (انظر الفصل /إرشادات عامة حول التعامل مع جزارة العشب).

صورة إيضاحية K

3. الضغط على مفتاح بدء التشغيل وفتحة التشغيل/الإيقاف.

صورة إيضاحية L

4. ترك الضغط على مفتاح بدء التشغيل والاستمرار بالضغط على مفتاح التشغيل/الإيقاف.

يجب عند استخدام سلة جمع العشب تفريغها بشكل منتظم، ولا فقد تنس فتحة الإخراج عن طريق قصاصات العشب (انظر الفصل تفريغ سلة جمع العشب).

جز منطقة الحافة

يمكن أن يقوم الجهاز بجز العشب على الحواف مثلاً على طول الجدار.

1. دفع جزارة العشب بالقرب من الجدار قدر الإمكان.

صورة إيضاحية M

يضمن السحب الجانبي أن العشب تم سحبه إلى نطاق القص.

صورة إيضاحية N

إيقاف التشغيل

1. ترك الضغط على مفتاح تشغيل/إيقاف.

صورة إيضاحية O

0 المحرك يتوقف.

ازالة علبة البطارية

1. فتح غطاء علبة البطارية.

صورة إيضاحية P

2. إزالة مفتاح الأمان.

3. الضغط على زر التحرير علبة البطارية.

مواصفات الجهاز

يتم في دليل التشغيل هذا شرح التجهيزات الكاملة. وفقاً للموديل، سيكون هناك اختلافات في نطاق التوريد (انظر العبوة).
للأسئلة، انظر صفحة الصور.

صورة إيضاحية A

① العجلة الأمامية

② ذراع تعديل ارتفاع القص

③ وسيلة تحرير علبة البطارية

④ غطاء البطارية

⑤ لوحة الطوارئ

⑥ حامل الكابل

⑦ كابل التحكم بالمحرك

⑧ مقبض

⑨ مفتاح بدء التشغيل

⑩ مفتاح التشغيل/الإيقاف

⑪ برغي تأمين قفل سريع

⑫ مؤشر ملء سلة جمع العشب

⑬ سلة جمع العشب

⑭ سدادة سريعة

⑮ العجلة الخلفية

⑯ إسفين المهداد

⑰ *جهاز الشحن

⑱ *علبة البطارية

⑲ مفتاح الأمان

* اختياري

علبة البطارية

يمكن أن يتم استخدام الجهاز بطارية Kärcher Fovalt مع علبة البطارية.

التركيب

تركيب المقبض

1. طي الجزء السفلي للمقبض.

صورة إيضاحية B

2. ثبيت المقبض بالسدادة السريعة.

صورة إيضاحية C

3. ثبيت الشبر العلوي من المقبض في الارتفاع المرغوب.

صورة إيضاحية D

4. ثبيت كابل التحكم بالمحرك بحامل الكابل.

صورة إيضاحية E

بعد التشغيل

تركيب إسفين المهداد

يتم استخدام إسفين المهداد، إذا كان ينبغي أن تبقى قصاصات العشب مرمتاً على العشب.

1. فتح غطاء فتحة الإخراج.

صورة إيضاحية F

2. إدخال إسفين المهداد في فتحة الإخراج.

3. غلق غطاء فتحة الإخراج.

تركيب سلة جمع العشب

يتم استخدام سلة جمع العشب، إذا كان ينبغي أن يتم تجميع قصاصات العشب للتخلص منها.

1. فتح غطاء فتحة الإخراج.

صورة إيضاحية G

2. إدخال غطاء فتحة الإخراج.

2. إزالة إسفين المهداد.

- الجهاز مخصص لجز العشب المنزلي.
- تم تتصميم الجهاز لئن دفعه باليد. ينبع عدم سحب الجهاز.
- لا يسمح بركوب الجهاز.
- يُحظر أي استخدام آخر. مستخدم الجهاز هو المسؤول عن الأضرار الناجمة عن الاستخدام غير السليم.

حماية البيئة

المواد المستخدمة في التغليف قابلة لإعادة التدوير. يرجى التخلص من مواد التغليف بطريقة تحافظ على البيئة.

تحتوي الأجهزة الكهربائية والإلكترونية مواد قابلة لإعادة التدوير وغالباً على إجزاءء مثل الطارات، متراتكماين أو الزبوب والتي قد تشكل خطورة على صحة الإنسان والبيئة في حالة التعامل بها أو تم التخلص منها بصورة خطأ. إن هذه الأجزاء ضرورية لتشغيل الجهاز بصورة سليمة. لا يجوز التخلص من الأجهزة المميزة بهذا الرمز مع النفايات المنزلية.

(REACH) إرشادات حول مواد المحتويات تجد المعلومات الحالية حول مواد المحتويات على الموقع: www.kaercher.com/REACH

الملحقات التكميلية وقطع الغيار

استخدام الملحقات التكميلية الأصلية وقطع الغيار الأصلية فقط، والتي تضمن تشغيل الجهاز بشكل آمن وحال من الاحتكالات. تجد المعلومات الخاصة بالملحقات التكميلية وقطع الغيار على الموقع www.kaercher.com

محتوى التسليم

محتوى تسليم الجهاز مصور على العبوة. تأكد من وجود جميع محتويات العبوة عند فتحها. وفي حالة نقص أية ملحقات تكميلية أو اكتشاف أي تلف بها ناتج عن عملية النقل، يرجى اخطار البائع.

تجهيزات السلامة

رموز على الجهاز

- اتبع جميع التدابير وإرشادات السلامة. اقرأ وافهم جميع التعليمات قبل استعمال المنتج.
- احرص من الآسياء المتطربة أو المقدوفة.



بعد جميع المشاهدين وخاصة الأطفال والحيوانات 15 م على الأقل من نطاق مكان العمل.



انتبه من الشفرة الحادة. تستمر الشفرات بالدوران بعد إيقاف المحرك.



قم بإزالة مفتاح الأمان قبل إجراء أعمال الصيانة.



ارتد معدات واقية للعيون وللسمع مناسبة عند العمل.



لا تعمل على المنحدرات الحادة.



لا تعرض الجهاز للمطر أو لظروف رطبة.

حماية من الحملة زائدة

الجهاز مزود بتجهيز حماية من الحملة الزائدة. إذا تم اكتشاف حملة زائدة، سيتم إيقاف الجهاز أوتوماتيكيا.

- لا ترفع أولاً تحمل الجهاز عندما يكون المحرك دائراً.
- تحتوي الأماكن غير المسئولة على الحياة البرية والحيوانات بشكل أكبر. تجنب المحتويات، الأثاث، العجارة أو أشياء أخرى مخفية. • قم بشغيل الجهاز فقط إذا كنت تواجه خلف المقبيض في مكان آمن.
- أن تكون العجلات الأربع موجودة على الأرض.
- أن لا تكون فتحة الإخراج مفتوحة أو غطاء فتحة الإخراج.
- عدم وضع أيدي أو أقدام بأقربى من هاجز القص.
- قم باتفاق المحرك ثم قم بـ إغلاق مفتاح الأمان. تأكد من أن جميع الأجزاء المتحركة متوقفة تماماً.
- دائمًا إذا تركت الجهاز بدون مراقبة عند التخلص من قصاصات العشب.
- قبل إزاله إنسداد أو تطيف فتحة الإخراج.
- قبل فحص الجهاز، تقطيفه أو إجراء أعمال عليه.
- بعد إصابة جسم غير. تحقق أولاً من الأضرار بالجهاز ثم قم بإصلاح هذه قبل إعادة تشغيل الجهاز.
- قبل إزاله سلة جمع العشب أو قطع العشب، كفان قذف العشب.
- إذا بدء الجهاز بالاهتزاز بشكل غير طبيعي. عليك فحص الجهاز فوراً:

 - الأجزاء المرخصة. شد الأجزاء المرخصة بشكل محكم إذا لزم الأمر.
 - فحص الأضرار وخاصة بالشفرة. إصلاح أو استبدال الأجزاء التالفة.

△ تقوية • تتحقق بشكل منتظم من عدم وجود التأكل والتألف في سلة جمع العشب.

تنبيه • تأكد من عدم انحراف كابل التحكم بالمحرك عند عملية التجمیع أو عند طي المقبيض أو عدم تلفه بطريقة أخرى.

مخاطر متبقية

△ تحذير

- حتى وإن لم يستخدم الجهاز كما هو منصوصاً عليه، إلا أن بعض المخاطر تبقى موجودة. من المحتمل أن تتشا المخاطر التالية عند استخدام الجهاز:
 - يمكن أن يسبب الاهتزاز بإصابات. استخدم لكم كل الأداة المناسبة، واستخدم المقبيض المخصص لذلك وحدد فترة العمل والعراض.
 - يمكن أن تؤدي الضوضاء إلى أضرار بالسمع. ارتدي واقية للسمع وحدد فرقة التحمل.
 - إصابات ناتجة عن الاحتكاك بالشاشة.

تقليل المخاطر

△ تنبيه

- قد يؤدي استخدام الجهاز لفترة طويلة متواصلة إلى حدوث مشاكل بسیران الدورة الدموية في اليدين وذلك بسبب الاهتزازات. لا يمكن أن يتم تجنب فترات الاستخدام بشكل عام، لأن ذلك يتعلق بعدة عوامل مؤثرة:
 - استعداد شخص ضعيف الدورة الدموية (غالباً أصحاب باردة ، وخرق في الأصابع)
 - درجة حرارة المحيط المنخفضة. استخدم قفازات دافعة لحماية اليدين.
 - يتم عن طريق مسك الجهاز بشكل قوي من دوران الدورة الدموية.
 - تكون عملية الاستخدام المتواصل أكثر ضرراً من الاستخدام المتقطع من خلال وقفات الاستراحة.
 - عند استخدام الجهاز بشكل منتظم وفترات طويلة وحيث أنها يتكرر ظهور عوارض مثل تميل الأصابع، اصحاب باردة، ينبع على مراجعة الطبيب.

الاستخدام المطابق للتعليمات

△ خطر

- الاستخدام غير المطابق للتعليمات
- خط على الحياة بسبب الإصابات بخروج استخدم الجهاز وفقاً لغرض المحدد له فقط.
- استخدم جزاء العشب بالطريقة للاستعمال المنزلي فقط.
- الجهاز مخصص للاستخدام الخارجي فقط.

المحتويات

12	إرشادات السلامة.....
13	الاستخدام المطابق للتعليمات
13	حماية البيئة
13	الملحقات التكميلية وقطع الغيار
13	محتوى التسليم
13	تجهيزات السلامة
14	مواصفات الجهاز
14	التراكيب
14	بدء التشغيل
14	التشغيل
15	النقل
15	التخزين
15	العناية والصيانة
15	مساعدة في حالة حدوث أعطال
15	بيانات الغة
15	الضمان
16	إعلان المطابقة لمتطلبات الاتحاد الأوروبي

سلامة مكان العمل

خطر خروج إصياب خطيرة عند تطوير أشياء من شفرة القطع أو عند التفاف سلك أو حبل على آدمة القطع. تتحقق بقدرة من مكان العمل قبل الاستخدام عدم وجود أي أشياء مثل العجارة، العصبي، المعادن، أسلاك، نظام أو العاب وجذب إرادة هذه إذا وجدت. لا تستخدم الجهاز إذا عند وجود أطفال أو حيوانات في محيط 15 متراً، نظراً لوجود خطر تطاير أشياء من شفرة القطع.

خطر الانفجار، يوكل الجهاز الشرس والتي يمكن أن تشعل الغبار أو الآخرة. لا تستخدم الجهاز في المناطق القابلة للانفجار والتي يتواجد فيها سوائل فايلة للاستعمال أو غازات أو أغصنة. • حذار خطيرة مع الأطفال. يمكن أن تجذب الأطفال إلى الجهاز والعمل به. رافق الأطفال لأنهم لا يظلو في نفس المكان الذي راحتهم فيه آخر مرة.

تحذير لا تستخدم الجهاز على العشب الرطب أو تحت المطر. لا تستخدم الجهاز عند وجود خطر البرق. • يعي خز العشب دائماً في وضع النهار أو عند وجود اضطراء اصطناعية جديدة. يجب إبعاد الأطفال عن المكان المراد جر العشب فيه وإن يكثروا تحت رقابة شخص راشد وإن لا يكره هذا الشخص بتشغيل الجهاز وكن أيضاً حريصاً وقم بإيقاف الجهاز عند وجود أحد الأطفال في المكان المراد جر العشب فيه. • كن حذراً عند الإقتراب إلى زوايا غامضة، شجرات، أشجار أو أحجام التي من الممكن أن تعيق الرؤية.

تنبيه مشغل الجهاز هو مسؤول عن الحوادث التي تحدث مع الأشخاص الآخرين أو لمنكراهم.

تشغيل آمن

خطر تأكد قبل كل استخدام للجهاز من أن الشفرة، خابور الشفرة ووحدة الشفرة غير متصلة أو متضررة. • لا تقوم بعقل مفتاح التشغيل/التفافية في وضع التشغيل إذا قهداً الأمر خطير للغاية. لا تسحب الجهاز الخلف إلا إذا كان هذا العمل ضروري جداً. إذا كان يجب عليك用 مواصلة سحب الجهاز بعيداً عن الجدار أو عائق ما، فعليك أولاً إزالة النار إلى أسفل لتجنب التعرض لمفترق الجهاز فوق دمدميك. • خطر إصابة بسبب الاحتكاك مع الشفرة المكسورة أو بسبب الأشياء المتطايرة. لا تقم بمالمة الجهاز عند بدء تشغيل المحرك أو عندما يكون المحرك دائراً. وإذا كانت إمالة الجهاز بد منها وضوره للغاية، فلتلتسهل بدء التشغيل، يمكنك رفع الجهة الأمامية للجهاز حوالي 5 سم تقريباً، اضغط على إلهاضه إلى ذلك برفق على المقاييس إلى أسفل. يجب عليك تقلل الجهاز إلى موضع التشغيل (يعني أن تكون جميع العجلات الأربع على الأرض) قبل البدء بعملية جر العشب. • إذا احتجت الشفرة إلى تغيير، تغيير، تنظيف أو فحص مكان يمكن أن يؤدي ذلك إلى سريري التيار في أجزاء الجهاز المعنية مما يتسبب هذا بحقيقة كهربائية.

تحذير شفرات الجهاز حادة. ارتد قفازات واقية متينة وأعمل بحذر إذا قمت بأعمال تركيب، تغيير، تنظيف أو فحص مكان البراغي. • قم ب AIS الاجراء المتأملة أو التالية في مجموعة عن طريق إجراء فحص على قربات مستخدمة إذا كانت الخواص والصوامول والبراغي مشدودة بشكل محكم. • لا تستخدم الجهاز الأجزاء المتأملة أو التالية قبل تشغيل الجهاز. • يجب أبداً إزالة الشفرة من العجلات بالمعنى قبل تشغيل الجهاز. يشكل صحيح. • لا يستخدم الفوهة لتشغيل الجهاز. • قم باتفاق الجهاز بالتفافية الشفرة لنقل الجهاز من وإلى المكان المراد جر العشب فيه أو إمالة الجهاز عند عبور سطح لا يوجد فيه عشب. • يجب إتفاق الشفرة قبل سور بطاقة فيها حفص. • لا تستخدم حماية مثل الحوارق / أو سلة جمع العشب. • ابعد بديك أو دمدميك عن أو من تحت الأجزاء الدوارة. قم باتفاق المحرك وفقاً

إرشادات السلامة



اقرأ قبل أول استخدام للجهاز إرشادات السلامة هذه، ودليل التشغيل المفصل هذا، وارشادات السلامة المرفقة بعلبة البطارية وكذلك دليل التشغيل المفصل المرفق بعلبة البطارية / جهاز الشحن القياسي. تم تصدير طرقاً ذللاً. تصرف على الكتب الخاصة للاستخدام لأحقق أسلوب الملاك الأخر. على إلى جانب الإرشادات الواردة في دليل التشغيل مراعاة القواعد العامة للسلامة والوقاية من الحوادث والتي يحددها المشرع القانوني.

درجات الخطير

خطر

• إشارة إلى خطر مباشر وشيك الحدوث وقد يؤدي إلى إصابات جسدية بالغة أو إلى الوفاة.

تحذير

• إشارة إلى موقف قد تجده المخاطر وقد يؤدي إلى إصابات جسدية بالغة أو إلى الوفاة.

تنبيه

• إشارة إلى موقف قد تجده المخاطر وقد يؤدي إلى إصابات بسيطة.

تنبيه

• إشارة إلى موقف قد تجده المخاطر وقد يؤدي إلى حدوث أضرار مادية.

إرشادات السلامة العامة

خطر يمكن أن يتسبب الجهاز بإصابات مميتة وأضرار جسدية جسيمة نتيجة بتر اليدين والقدمين وكذلك من خلال قذف الأشياء. • إصابات خطيرة بسبب العمل بدون تر��ر لا تستخدم الجهاز إذا كنت تحت تأثير المخدرات أو الكحول أو الأدوية أو عندما تكون مهدماً.

تحذير لا يسمح للأطفال والأشخاص الذين ليس لهم خبرة بالتعليمات هذه باستخدام هذا الجهاز يمكن أن تحدث الالوان المحملة نتيجة بتر اليدين والقدمين والعينين. لا يسمح للأطفال باللعب بهذه الجهاز. • يجب مراعاة الأطفال للتأكد من عدم لعهم بالجهاز. • استخدم الجهاز فقط مع عملية الطاربة الخاصة كما هو مذكور في دليل التشغيل هذا. على عبد استخدام الأجهزة التي تعمل بالبطارية والتي يجب فيها اتباع الحذر بشكل أساسى لتجنب المخاطر والاصياب وتشوب حرق وتقليل تسبس سائل البطارية. • ارتد عند استخدام الجهاز سروال طويل وتنقل، ملابس ذات أكمام طويلة وحزمة ضد التارتفاع. لا تحمل حافي القدمين. لا ترتدى الصنادل أو السراويل القصيرة. تجنب ارتداء ملابس فضفاضة أو ملابس متزوجة باربطة وشرطة. • يجب عليك ارتداء نظارات واقية متزوجة بحماية جانبية. • قم دائمًا بتوجيه الجهاز بشكل عرضي على طول المنحدر



THANK YOU!

MERCI! DANKE! ¡GRACIAS!



Registrieren Sie Ihr Produkt und profitieren Sie von vielen Vorteilen.

Register your product and benefit from many advantages.

Enregistrez votre produit et bénéficier de nombreux avantages.

Registre su producto y aproveche de muchas ventajas.

www.kaercher.com/welcome



Bewerten Sie Ihr Produkt und sagen Sie uns Ihre Meinung.

Rate your product and tell us your opinion.

Évaluer votre produit et dites-nous votre opinion.

Reseñe su producto y díganos su opinión.



www.kaercher.com/dealersearch

Alfred Kärcher SE & Co. KG

Alfred-Kärcher-Str. 28-40
71364 Winnenden (Germany)

Tel.: +49 7195 14-0
Fax: +49 7195 14-2212

