

KÄRCHER

makes a difference

LTR 18-25 Battery

English
العربية

5
11












Register
your product
www.kaercher.com/welcome







EAC



59693050 (07/20)

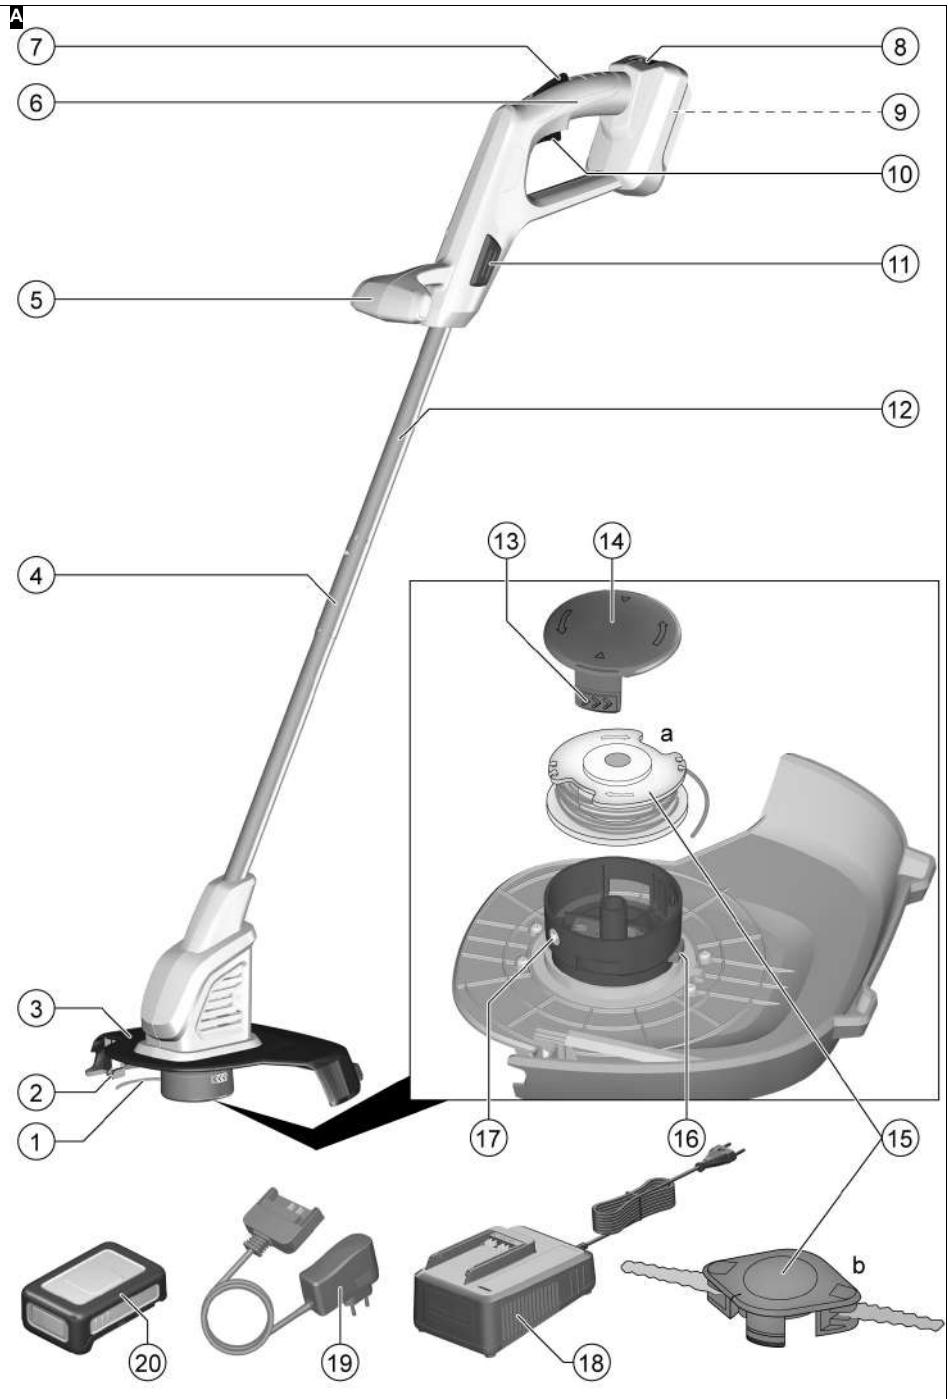

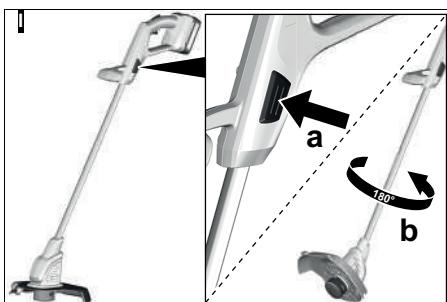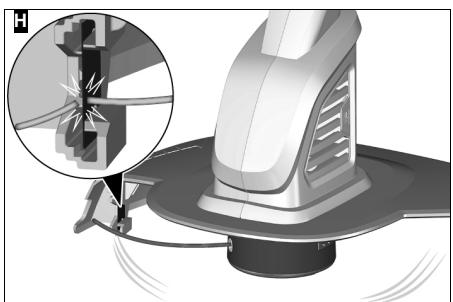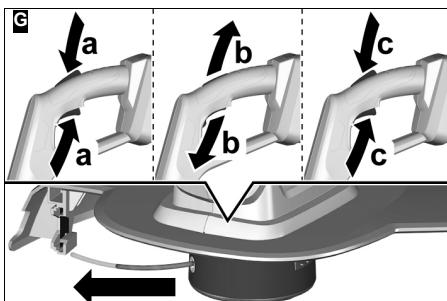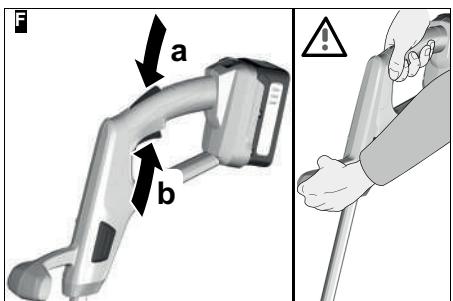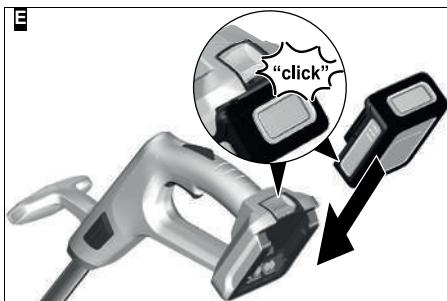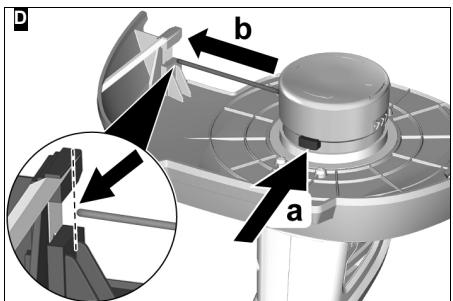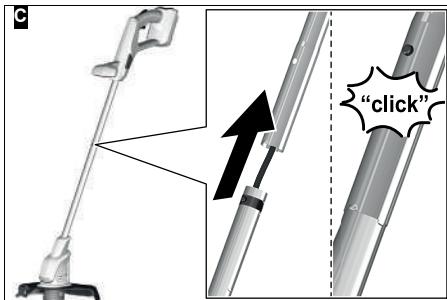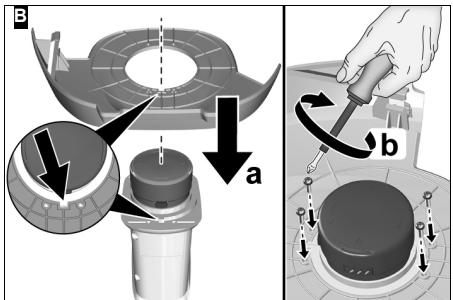

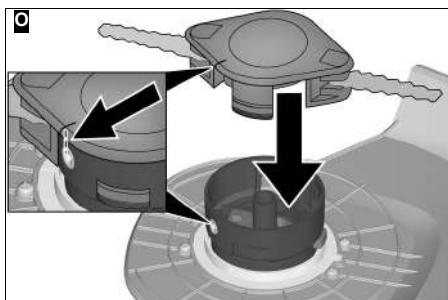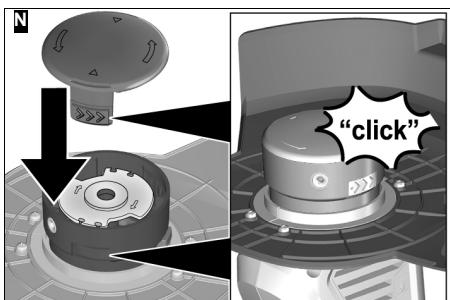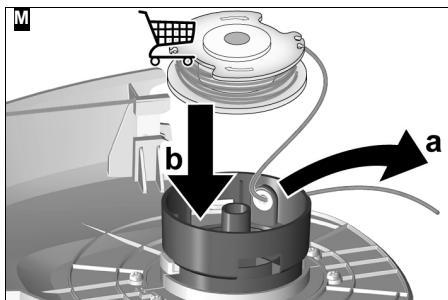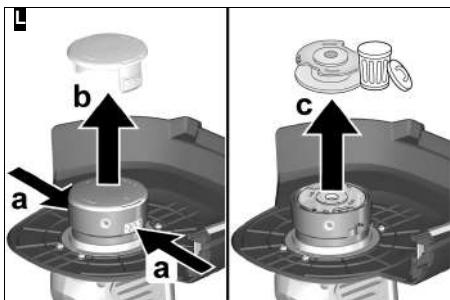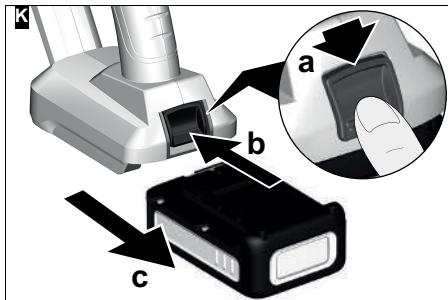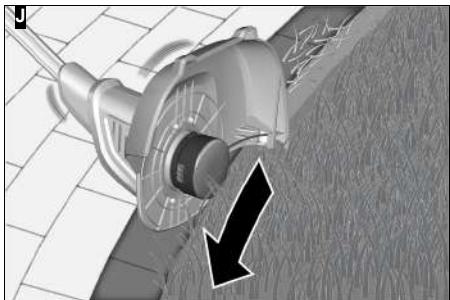

Contents

Safety instructions	5
Intended use.....	6
Environmental protection.....	7
Accessories and spare parts	7
Scope of delivery	7
Symbols on the device	7
Device description	7
Installation	7
Initial startup	7
Operation.....	8
Transport	8
Storage	8
Care and service	8
Troubleshooting guide	9
Warranty	9
Technical data	9
Vibration value.....	9
EU Declaration of Conformity	10

Safety instructions



Read these safety instructions, these original instructions, the safety instructions provided with the battery pack and the operating instructions supplied with the battery pack/standard charger before using the device for the first time. Proceed accordingly. Keep the booklets for future reference or for future owners.

In addition to the notes in the operating instructions, you also need to take into consideration the general safety regulations and accident prevention guidelines applicable by law.

Hazard levels

△ DANGER

- Indication of an imminent threat of danger that will lead to severe injuries or even death.

△ WARNING

- Indication of a potentially dangerous situation that may lead to severe injuries or even death.

△ CAUTION

- Indication of a potentially dangerous situation that may lead to minor injuries.

ATTENTION

- Indication of a potentially dangerous situation that may lead to damage to property.

General safety instructions

△ DANGER • Danger of explosion. The device creates sparks that may ignite dust, gas or vapours. Do not operate the device in explosive atmospheres, such as in the presence of flammable liquids, gases or dusts.

△ WARNING • Danger of accident. Keep your work area clean and well-lit. • Keep children and other persons out of the work area while you are using the device. • Risk of electric shock. Protect the device from rain and moisture. • Avoid switching the device on unintentionally. Make sure that the on/off switch is in the off position before connecting the battery pack, lifting or carrying the device. • Injuries through an adjustment key left in a rotating part of the tool. Remove the adjust-

ing key before switching the device on. • Do not run but rather walk when working with the device. Do not walk backwards. Avoid an abnormal posture, keep a stable, safe footing and maintain your balance. • Never use the device if the on/off switch on the handle does not switch on and off correctly. • Do not overload the device. • Keep the cutting tools sharp and clean. Sharp cutting tools are easier to control and do not block so easily. • Switch the motor off, remove the battery pack and make sure that all moving parts have stopped moving:

- Before making any adjustments.
- Before leaving the device unattended.
- Before checking, cleaning or servicing the device.
- Before removing a blockage or cleaning the ejection chute.
- Before changing accessories.
- After hitting a foreign object. First check the device for damage and repair any damage before restarting the device.
- When the device starts to vibrate unusually. First check the device for damage and repair any damage before restarting the device.

△ CAUTION • You must not operate the device

when you are under the influence of medication or drugs which restrict your reactive capacity. Only work with the device when you are well rested and are in good health.

• Wear suitable personal protective equipment when working with the device. Protective equipment such as dust masks, non-slip shoes, safety helmet or hearing protection reduce the risk of injury. • Wear especially safety glasses and hearing protection. • Hearing protection can impair your ability to hear warning sounds, so pay attention to hazards in your vicinity and in the work area. • Wear head protection when working in areas with a danger of falling objects. **WARNING**

• Wear long, heavy trousers, clothing with long arms and non-slip boots when working with the device. Do not work barefoot. Do not wear sandals or short trousers. Avoid wearing loose clothing or clothing with cords and straps. **CAUTION** • Risk of injury when loose fitting clothing, hair or jewellery is caught by moving parts of the device. Keep clothing and jewellery away from moving parts of the device. Tie long hair back. • Use the device and accessories only according to these instructions and take the working conditions and the work to be performed into consideration to avoid dangerous situations.

Safe operation

△ DANGER • Severe injuries when objects are flung by the cutting blade or when the cutting tool becomes entangled in wires or cords. Inspect the work area thoroughly for objects such as stones, sticks, metal, wires, bones or toys and remove these before using the device.

△ WARNING • The device is not intended for use by children, persons with restricted physical, sensory or mental abilities or persons unfamiliar with these instructions. • Use the device only in daylight or under good artificial lighting. • Do not operate the device on wet grass or in the rain. • Maintain a minimum distance of 15 m from persons and animals. Stop the device when any persons or animals enter this area. • Keep the cutting head below the level of your hips. • Never use the device with damaged or absent safety devices.

- Never use a metallic cutting string.
- Only operate the device outdoors.
- Keep your hands and feet away from the cutting area, especially when switching on the motor.
- Risk of injury because the blades continue rotating after the motor has been switched off.
- Danger of injury. The blade on the protective cover for shortening the cutting string is very sharp and you must avoid touching this, especially when cleaning the device.
- Make sure that the ventilation openings are free of deposits.
- Check the device for damage before each use and after any impacts. Damaged parts, e.g. a switch, must be repaired or replaced by the authorised Customer Service department.
- Ensure that the drive head attachment is correctly fitted and fastened.
- Ensure that all protective devices, deflectors and handles are correctly fitted and securely fastened.
- Check that the string cutter is correctly positioned and secured each time before use.
- Use only replacement strings from the original manufacturer. Do not use any other cutting attachment.
- Danger of injury. Do not make any modifications to the device.

Note ● Regulations may restrict the use of this device in some regions. Seek advice from your local authorities.

Safe servicing and care

⚠ WARNING ● After pushing out a new string, bring the device into the normal operating position before switching it on.

- Ensure that the device is in a safe condition by regularly checking that all bolts, nuts and screws are screwed tight.
- Check that the moving parts function correctly and are not blocked, and that no parts are broken or damaged. Have a damaged device repaired before using it.
- Switch the motor off, remove the battery pack and make sure that all moving parts have stopped moving:

- Before cleaning or servicing the device.
- Before changing accessories.

⚠ CAUTION ● Only use accessories and spare parts which are approved by the manufacturer. Only original accessories and original spare parts ensure that the appliance will run fault-free and safely.

ATTENTION ● Clean the product with a soft, dry cloth each time after use.

Note ● Service and maintenance work may only be performed by suitably qualified and specially trained personnel. We recommend sending the product to an authorised service centre for repair.

- You may only perform the adjustments and repairs described in these operating instructions. Contact your authorised Customer Service department for other repairs.
- Have damaged or illegible warning signs on the device replaced by the authorised Customer Service department.

Safe transport and storage

⚠ WARNING ● Switch the device off, allow it to cool down and remove the battery pack before storage or transportation.

⚠ CAUTION ● Risk of injury and damage to the device. Secure the device against movement or falling down during transport.

ATTENTION ● Remove all foreign bodies from the device before storage or transportation.

- Store the device in a dry, well ventilated location out of the reach

of children. Keep the device away from corrosive substances such as garden chemicals.

- Do not store the device outdoors.

Residual risks

⚠ WARNING

- Certain residual risks remain present, even when the device is operated in the prescribed manner. The following dangers can be present when using the device:
 - Vibration can cause injuries. Use the correct tools for the job, use the handles provided and restrict the working time and hazard exposure time.
 - Noise can cause hearing injuries. Wear hearing protection and limit the duration of exposure.
 - Injuries due to flung objects.

Risk reduction

⚠ CAUTION

- Using the device for longer periods can cause poor circulation in the hands due to vibrations. A general period of use cannot be set, because this depends on several influencing factors:
 - Personal tendency to suffer from poor circulation (frequently cold fingers, tingling sensation in the fingers)
 - Low ambient temperature. Wear warm gloves to protect your hands.
 - Holding the device too tightly hindering blood circulation.
 - Continuous operation is more harmful than operation interrupted by work breaks.
- You should see a doctor if using the device regularly and for lengthy periods of time, and in the event of repeated occurrences of symptoms such as tingling in the fingers or cold fingers.

Intended use

⚠ DANGER

Improper use

Risk of fatal injury from incision injuries
Only use the device for its proper use.

Never use metal blades such as saw blades or brush blades.

⚠ WARNING

Flying objects

Risk of injury and damage

Maintain a minimum distance of 15 m from persons, animals and other objects.

- The device is intended for outdoor use.
- The device can be used for trimming grass along walls, fences, trees and on edgings.
- The device can also be used for mowing in places that are difficult to access with lawnmowers, e.g. ditches, slopes and clearings.
- Modifications and changes not authorised by the manufacturer are prohibited.
- Never use the device in a wet environment or in the rain.
- Never mow wet grass or other growth.

Environmental protection

The packing materials can be recycled. Please dispose of packaging in accordance with the environmental regulations.

 Electrical and electronic appliances contain valuable, recyclable materials and often components such as batteries, rechargeable batteries or oil, which - if handled or disposed of incorrectly - can pose a potential threat to human health and the environment. However, these components are required for the correct operation of the appliance. Appliances marked by this symbol are not allowed to be disposed of together with the household rubbish.

Notes on the content materials (REACH)

Current information on content materials can be found at: www.kaercher.com/REACH

Accessories and spare parts

Only use original accessories and original spare parts. They ensure that the appliance will run fault-free and safely.

Information on accessories and spare parts can be found at www.kaercher.com.

Scope of delivery

The scope of delivery for the appliance is shown on the packaging. Check the contents for completeness when unpacking. If any accessories are missing or in the event of any shipping damage, please notify your dealer.

Symbols on the device

 Follow all warning notices and safety instructions. Read and comprehend all instructions before using the product.

 Always wear suitable eye protection and hearing protection when working with the device.

 Do not subject the device to rain or moist conditions.

 Do not use saw blades or metal blades.

 Danger due to flung objects. Keep a safe distance away.

 Hand injuries from sharp cutting tool.

- ① Cutting string
- ② Cutting edge
- ③ String guard
- ④ Lower shaft
- ⑤ Front handle
- ⑥ Rear handle
- ⑦ Unlocking button
- ⑧ Battery pack release
- ⑨ Type plate
- ⑩ Power switch
- ⑪ Shaft release
- ⑫ Upper shaft
- ⑬ Reel cover release
- ⑭ Reel cover
- ⑮ Cutting tool
 - a) String reel
 - b) *Trimmer blade
- ⑯ Button for releasing the string
- ⑰ Eye
- ⑱ *Quick Charger Battery Power 18 V
- ⑲ *Standard Charger Battery Power 18 V
- ⑳ *Rechargeable battery pack

* optional

Rechargeable battery pack

The device can be operated with a Kärcher 18 V Battery Power battery pack.

Installation

Installing the string guard

⚠ WARNING

Blade on the string guard

Incision injuries

Install the string guard before using the device for the first time.

⚠ WARNING

Exposed string

Incision injuries

Never use the device without the string guard.

Illustration B

The string guard must face the operator.

1. Insert the string guard into the bracket.
2. Screw the string guard to the bracket.

Installing shaft

1. Connect the upper and lower shaft segments.

Illustration C

Initial startup

Adjusting the string length

1. Press the button for releasing the string and pull the string out of the string reel and up to the cutting edge.

Illustration D

Installing the battery pack

- Push the battery pack into the mounting in the device until it audibly latches into place.

Illustration E

Operation

Working techniques

⚠ CAUTION

Obstacles in the mowing area

Risk of injury and damage

Before starting mowing, check the work area for objects that may be flung away, e.g. wires, stones, cords or glass.

- Press the unlocking button.
- Illustration F**
- Press the power switch.
The device starts up.
- Guide the cutting head parallel to the ground.
- Guide the device in a semi-circular movement over the cutting area.
- Mow long grass in several passes.

Extending the string length during operation

The string on the device wears during mowing and becomes shorter due to fraying and being torn off. A string that is too short will result in unsatisfactory mowing results.

Note

The string length can be extended during operation.

- Release the unlocking button and power switch.

Illustration G

- Press the unlocking button and power switch.
The string extends automatically and is automatically trimmed to the correct length by the cutting blade.

Illustration H

Note

You must replace the string reel if the string no longer extends automatically (see Chapter Replacing the string reel).

Mowing edges

- Remove the battery pack (see Chapter *Removing the battery pack*).
- Press the shaft release.
- Illustration I**
- Turn the shaft by 180°.
- Mount the battery pack (see Chapter *Installing the battery pack*).
- Press the unlocking button.
- Press the power switch.
- Mow the edge regions.

Illustration J

Changing the cutting tool

The string reel and the trimmer blade are available as cutting tools.

- Remove the battery pack (see Chapter *Removing the battery pack*).
- Remove the unneeded cutting tool and fit the desired cutting tool (see Chapter *Replacing the cutting tool*).

Removing the battery pack

Note

During longer work breaks, remove the battery pack from the device and secure it against unauthorised use.

- Pull the battery pack unlocking button in the direction of the battery pack.

Illustration K

- Press the battery pack unlocking button to unlock the battery pack.
- Remove the battery pack from the device.

Finishing operation

- Remove the battery pack from the device (see Chapter *Removing the battery pack*).
- Clean the device (see Chapter *Cleaning the device*).

Transport

⚠ CAUTION

Failure to observe the weight

Risk of injury and damage

Be aware of the weight of the device during storage.

- Remove the battery pack (see Chapter *Removing the battery pack*).
- Secure the device against slipping and tipping over when transporting in vehicles.

Storage

Clean the device before storing (see Chapter *Cleaning the device*).

- Store the device in a dry, well ventilated location.
Keep away from corrosive substances such as garden chemicals and defrosting salt. Do not store the device outdoors.

Care and service

⚠ CAUTION

Uncontrolled startup

Incision injuries

Remove the battery from the device before all work on the device.

⚠ CAUTION

Risk of injury from sharp blades

Wear safety goggles and protective gloves when working on the device.

Cleaning the device

- Remove any remaining cutting residue from the string guard and the cutting head.
- Clean the device components with a damp cloth if required.
- Clean the battery mount and electric contacts of dirt and foreign bodies regularly.

Replacing the cutting tool

Replacing the string reel

- Press the string reel cover unlocking mechanism and remove the string reel cover.
- Illustration L**
- Remove and dispose of the string reel.
- Feed the end of the string on the new string reel through the eye.
- Illustration M**
- Fit the string reel in the support.
- Fit the string reel cover in the support. Take care to ensure that the string reel cover audibly latches into place.
- Illustration N**
- Adjust the string length (see Chapter *Initial startup*).

Replacing the trimmer blade

1. Press the trimmer blade unlocking mechanism and remove the trimmer blade.

2. Fit the new trimming blade into the support. Note the correct position via the marking.
Illustration O

Troubleshooting guide

Malfunctions often have simple causes that you can remedy yourself using the following overview. When in doubt, or in the case of malfunctions not mentioned here, please contact your authorised Customer Service.

As the battery pack ages, even if it is looked after, its capacity reduces such that the full run time will no longer be reached when fully charged. This does not indicate a defect.

Fault	Cause	Rectification
The device does not start up	Battery pack is not inserted correctly.	<ul style="list-style-type: none">● Push the battery pack into the mounting until it latches into place.
	Battery pack is empty	<ul style="list-style-type: none">● Charge the battery pack.
	Battery pack is defective.	<ul style="list-style-type: none">● Replace the battery pack.
The device stops during operation	String is too long and is causing the motor to overload	<ul style="list-style-type: none">● Install the string guard. The string will automatically be shortened.
	Cutting head blocked by cutting residue	<ul style="list-style-type: none">● Remove the cutting residue.
	Motor is overloaded	<ul style="list-style-type: none">● Mow only suitable cutting material, see Chapter <i>Intended use</i>.
	Motor has overheated	<ul style="list-style-type: none">● Stop working and allow the motor to cool down.
	The battery has overheated	<ul style="list-style-type: none">● Stop working and allow the battery to cool down to normal battery temperature.

Warranty

The warranty conditions issued by our relevant sales company apply in all countries. We shall remedy possible malfunctions on your appliance within the warranty period free of cost, provided that a material or manufacturing defect is the cause. In a warranty case, please contact your dealer (with the purchase receipt) or the next authorised customer service site.
(See overleaf for the address)

Technical data

LTR 18-25		
Device performance data		
Working voltage of the battery	V	18
Working width	mm	250
Cutting string, diameter	mm	1,6
Max. speed (± 100)	/min	9500
Determined values in acc. with EN 50636-2-91		
Sound pressure level L_{pA}	dB(A)	76,8
Uncertainty K_{pA}	dB(A)	3,0
Sound power level $L_{WA} + K$ uncertainty WA	dB(A)	94
Front handle hand-arm vibration value	m/s^2	0,3
Rear handle hand-arm vibration value	m/s^2	0,5
Uncertainty K	m/s^2	1,5
Dimensions and weights		
Length x width x height	mm	1184 x 296 x 286
Weight (without battery pack)	kg	1,5

Subject to technical modifications.

Vibration value

⚠ WARNING

The specified vibration value was measured using a standard test procedure and may be used to compare devices.

The specified vibration value may be used in a provisional assessment of the load.

Depending on the way the device is used, the vibration emission can deviate from the specified overall value during the current use of the device.

Device with a hand-arm vibration value > 2.5 m/s² (see chapter Technical Data in the operating instructions)

⚠ CAUTION • Uninterrupted use of the device for several hours can lead to numbness. • Wear warm gloves to protect your hands. • Take regular breaks from work.

EU Declaration of Conformity

We hereby declare that the machine described below complies with the relevant basic safety and health requirements in the EU Directives, both in its basic design and construction as well as in the version placed in circulation by us. This declaration is invalidated by any changes made to the machine that are not approved by us.

Product: Battery-operated Lawn trimmer/Edge trimmer

Type: LTR 18-25 Battery 1.444-30x.0

Currently applicable EU Directives

2000/14/EC (+2005/88/EC)

2006/42/EC (+2009/127/EC)

2011/65/EU

2014/30/EU

Harmonised standards used

EN 60335-1:2012+A11:2014+A13:2017

EN 50636-2-91:2014

EN 50581: 2012

EN 55014-1: 2017

EN 55014-2: 2015

Conformity evaluation procedure used

2000/14/EC and amended by 2005/88/EC: Annex VI

Name and address of the notified body involved

Société Nationale de Certification et d'Homologation 2

a. Kalchesbruck

2a. Kalchesbruck

L-1852 Luxembourg

ID no. 0499

Sound power level dB(A)

Measured: 92,3

Guaranteed: 94

The signatories act on behalf of and with the authority of the company management.

H. Jenner
Chairman of the Board of Management

S. Reiser
Director Regulatory Affairs & Certification

Documentation supervisor: S. Reiser

Alfred Kärcher SE & Co. KG

Alfred-Kärcher-Str. 28 - 40

71364 Winnenden (Germany)

Ph.: +49 7195 14-0

Fax: +49 7195 14-2212

Winnenden, 2018/07/01

البيانات الفنية

LTR 18-25

أداء الجهاز		
18	V	جد شغيل الطاربة
250	mm	عرض العمل
1,6	mm	خط القطع، قطر
9500	/min	حد أقصى لسرعة الدوران (± 100)
القيم المسجلة وفقاً للمواصفة EN 50636-2-91		
76,8	dB(A)	مستوى انبعاث الصوت L_{DA}
3,0	dB(A)	قيمة الشك K_{DA}
94	dB(A)	مستوى قرحة الصوت L_{WA} + قيمة الشك K_{WA}
0,3	m/s ²	قيمة الاهتزاز على اليد - الساعد بالمقاييس الأمامي
0,5	m/s ²	قيمة الاهتزاز على اليد - الساعد بالمقاييس الخلفي
1,5	m/s ²	K قيمة الشك
الأبعاد الوزن		
1184 x 296 x 286	mm	الطول x العرض x الارتفاع
1,5	kg	الوزن (بدون علية بطارية) المواصفات الفنية خاضعة للتعديل.

قيمة الاهتزاز

تحذير

نم قياس قيمة الاهتزاز المذكورة باستخدام طريقة اختبار قياسية ويمكن استخدامها مقارنة الأجهزة.
يمكن أن يتم استخدام قيمة الاهتزاز المذكورة للتنبيم المؤقت للعين.

اعتماداً على نوع وكيفية تشغيل الجهاز يمكن أن يختلف انبعاث النبذبات أثناء الاستخدام الحالي للجهاز عن القيمة المذكورة.

الأجهزة التي تصدر قيمة اهتزاز لليد أو الذراع $> 2,5 \text{ م}/\text{s}^2$
(انظر فصل البيانات الفنية في دليل التشغيل)

تحذير • يمكن أن يؤدي استعمال الجهاز لعدة ساعات دون انقطاع إلى ظهور شعور بالتشدّر. • استخدم فحازات دافئة لحماية اليدين. • عليك التوقف للراحة بشكل منتظم.

العناية والصيانة

▲ تدوير
بعد التشغيل بدون تحكم
اصبات بجروح
قم بازالة البطارية من الجهاز قبل القيام بأي أعمال على الجهاز.

▲ تدوير
خطر الاصابة نتيجة الشفرة الحادة
ارتد نظارات واقية وواقي للسمع في جميع الأعمال على الجهاز.

تنظيف الجهاز

- قم بازالة بقايا جر الحشائش من واقي الخط والرأس القاطع.
- مسح اجزاء الجهاز باستخدام فوطة رطبة.
- يجب إزالة الانساخات والاجسام الغريبة بانتظام من موضع البطارية والملامسات الكهربائية.

استبدال أداة القطع

استبدال بكرة الخط

- المضغط على وسيلة تحرير غطاء البكرة ثم إزالة غطاء البكرة.

صورة إيضاحية 1

- إزالة بكرة الخط وتخلص منها.
- ادخال طرف الخط ليكرر الخط الجديدة عبر الفتحة.

صورة إيضاحية M

- تركيب بكرة الخط في الحامل.
- وضع غطاء البكرة على الحامل. الحرص على مراعاة ثبات عطاء البكرة في مكانها بشكل مسموع.

صورة إيضاحية N

- ضبط طول الخط (انظر الفصل بعده التشغيل).

استبدال شفرة الحف

- الضغط على وسيلة تحرير شفرة الحف ثم إزالتها.
- تركيب شفرة الحف الجديدة في الحامل. الحرص على الموضع الصحيح عن طريق العلامة.

صورة إيضاحية O

مساعدة في حالة حدوث أعطال

مع مرور الزمن ستحتخفض سعة البطارية حتى مع العناية الجيدة، بحيث لا يتم الوصول ل زمن التشغيل الكامل حتى عندما تكون البطارية مشحونة بشكل كامل أيضًا. هذا لا يهدى عيابا.

ازالة علبة البطارية

إرشاد

- عبد علبة العمل لفترة طويلة. قم بإزالة علبة البطارية من الجهاز وتأميتها ضد الاستخدام غير المصرح به.
- شد زر التحرير على علبة البطارية في اتجاه علبة البطارية.

صورة إيضاحية K

- الضغط على زر التحرير للغاء تأمين علبة البطارية.
- إخراج علبة البطارية من الجهاز.

إيقاف التشغيل

- إزالة علبة البطارية من الجهاز (انظر الفصل /إزالة علبة البطارية).
- تنظيف الجهاز (انظر الفصل تنظيف الجهاز).

النقل

▲ تدوير

عدم مراعاة الوزن

خطر الاصابة وخطر التعرض لأضرار احرص عند التخزين على مراعاة وزن الجهاز.

- إزالة علبة البطارية (انظر الفصل /إزالة علبة البطارية).
- يجب تأمين الجهاز ضد الانزلاق والانقلاب عند نقله في المركبات.

التخزين

يجب تنظيف الجهاز قبل كل تخزين (انظر الفصل تنظيف الجهاز).

- تخزين الجهاز في مكان جاف وذو هوية جيدة. بعد إزالة علبة البطارية.
- المواد المسبيبة للتآكل مثل المواد الكيميائية للحدائق. عدم تخزين الجهاز في الهواء الطلق.

في الغالب تكون لحالات أسباب بسيطة يمكن التغلب عليها ببساطة بالاستعانت بالعرض العام التالي. في حالات الشك أو عند حدوث اختلالات غير مذكورة هنا فيرجى التوجه إلى خدمة العملاء المعتمدة.

خطا	السبب	حل المشكلة
الجهاز لا يعمل	على البطارية غير مرکبة بشكل صحيح.	دفع علبة البطارية حتى تثبت في مكانها.
	على البطارية فارغة.	شحن علبة البطارية.
	على البطارية معطلة.	استبدال علبة البطارية.
الجهاز يتوقف أثناء التشغيل	المحرك	تركيب واقي الخط. يتم تقصير الخط تلقائياً.
	الرأس القاطع مسدود بسبب بقايا المواد المقطوعة.	قم بازالة بقايا المواد المقطوعة.
	حمل زاند على المحرك	جز مواد مناسبة فقط، انظر فصل الاستخدام المطابق للتعليمات.
	المحرك ساخن للغاية	إيقاف العمل، وترك المحرك حتى يبرد.
	البطارية ساخنة للغاية	إيقاف العمل والتقطار حتى تصبح درجة حرارة علبة البطارية في النطاق الطبيعي.

الضمان

يسري في كل دولة شروط الضمان التي تتبعها شركة التسويق المتخصصة التابعة لنا. نحن نتولى إصلاح الأخطاء التي قد تطرأ على جهازك خلال فترة الضمان بدون مقابل، عندما يكون سبب هذه الأعطال ناجم عن عيب في المواد المستخدمة أو في عملية التصنيع. في حالة استحقاق الضمان، توجه من فضلك بغضيمه الشراء إلى أقرب موزع أو مركز خدمة عملاء معتمد. (العنوان على الصفحة الخلفية)

خطر عن طريق الأشياء المتطايرة. حافظ على مسافة
ما.



- لا تستخدم الجهاز بدون واقٍ للخيط أبداً.
B صورة إيضاحية
يجب أن يشير واقٍ الخيط نحو المشغل.
1. إدخال واقٍ الخيط بالحاصل.
2. توصيل واقٍ الخيط مع الحامل بالبراغي.

تركيب الساق

1. توصيل الساق العلوية مع السفلية.
C صورة إيضاحية

بدء التشغيل

ضبط طول الخيط

1. الضغط على زر فك الخيط وشد الخيط حتى حافة القطع من
بكرة الخيط.

D صورة إيضاحية

تركيب علبة البطارية

1. دفع علبة البطارية في مكان الإدخال بالجهاز حتى تثبت.

E صورة إيضاحية

الاستعمال

تقنيات العمل

▲ تنوية

عقبات في نطاق القص

خطر الإصابة وخطر التعرض للأضرار
تحقق من عدم وجود أي أشياء في نطاق العمل قبل البدء بقص
العشب على سبيل المثال أسلاك أو حجارة أو خيوط أو زجاج.

1. اضغط على زر التحرير.

F صورة إيضاحية

2. الضغط على مفتاح الجهاز
الجهاز يعمل.

3.

- تمرين الرأس القاطع بالتواري مع الأرض.

4.

- تمرين الجهاز عند الجر في حركة هالية الشكل فوق المواد
المراد قطعها.

5.

- جز ارتفاع العشب على عدة خطوات.

تطویل طول الخيط أثناء التشغیل

باتكال الخيط عند الجر ويصبح أقصر نتيجة التشذرم والممزق. يُؤدي استخدام الخيط شديد القصر إلى نتيجة جر غير مرضية.

رشاد

- يمكن تطوييل طول الخيط أثناء التشغيل.
1. تحرير زر التحرير وزر الجهاز.

G صورة إيضاحية

2. الضغط على زر التحرير وزر الجهاز.

يتم تطوييل الخيط أوتوماتيكياً ويتم تقصيره بشفرة القص حسب الطول المناسب.

H صورة إيضاحية

إذا لم يتم تطوييل الخيط أوتوماتيكياً، يجب استبدال بكرة الخيط
(انظر فصل استبدال بكرة الخيط).

جز منطقة الحافة

1. إزالة علبة البطارية (انظر الفصل إزالة علبة البطارية).
2. الضغط على ساق التحرير.

I صورة إيضاحية

3.

- إدراة الساق 180°.

4.

- تركيب علبة البطارية (انظر الفصل تركيب علبة البطارية).

5.

- اضغط على زر التحرير.

6.

- الضغط على مفتاح الجهاز.

7.

- جز منطقة الحافة.

J صورة إيضاحية

تغيير أداة القطع

يتوفر لادة القطع كل من بكرة الخيط وشفرة الجر.

1. إزالة علبة البطارية (انظر الفصل إزالة علبة البطارية).
2. إزالة أداة القطع غير المستخدمة وتتركيب أداة القطع المرغوبة

(انظر فصل استبدال أداة القطع).

إصابة بجروح عن طريق أدلة قطع حادة.



مواصفات الجهاز

يتم في دليل التشغيل هذا شرح التجهيزات الكاملة. وفقاً للموديل، ستكون هناك اختلافات في نطاق التوريد (انظر العبوة).
الأشكال، انظر صفحة الصور

A صورة إيضاحية

- ① خيط القطع

- ② حافة القطع

- ③ واقٍ الخيط

- ④ ساق سفلية

- ⑤ المقبض الأمامي

- ⑥ المقبض الخلفي

- ⑦ زر التحرير

- ⑧ وسيلة تحرير علبة البطارية

- ⑨ لوحة الطازار

- ⑩ مفتاح الجهاز

- ⑪ ساق التحرير

- ⑫ ساق علوية

- ⑬ وسيلة تحرير غطاء البكرة

- ⑭ غطاء البكرة

- ⑮ أدلة القطع

- ⑯ بكرة الخيط

- ⑰ شفرة الحف

- ⑱ زر حل الخيط

- ⑲ حلقة

- ⑳ *جهاز شحن سريع لبطارية بقوة بـ 18 فولط

- ㉑ *جهاز شحن قياسي بطارية بقوة بـ 18 فولط

- ㉒ *علبة بطارية قابلة لإعادة الشحن

* اختياري

علبة البطارية

يمكن أن يتم استخدام الجهاز عليه البطارية بقوة 18 فولط مع علبة البطارية.

التركيب

تركيب واقٍ الخيط

Δ تحذير

شفرة بواقٍ الخيط

اصبات بجروح

ركب واقٍ الخيط قبل أول تشغيل للجهاز.

Δ تحذير

خطوط مكشوفة

اصبات بجروح

الاستخدام المطابق للتعليمات

صيانة وعناية آمنة

▲ تحذير

الاستخدام غير المطابق للتعليمات

خطر على الحياة بسبب الأصابة بجروح استخدم الجهاز وفقاً الغرض المحدد له فقط.

لا تستخدم أي شفرة معدنية مثل أنسال المناشير أو شفرات مجنة.

▲ تحذير

أشياء مقنطرة

خطر الأصابة وخطر التعرض لأضرار عليك الحفاظ على وجود مسافة لا تقل عن 15 متراً عن الأشخاص والحيوانات والأبناء.

● الجهاز مخصص العمل في الهواء الطلق.

● يمكن استخدام الجهاز لتفيف الحشائش التي تنمو على طول الجدران أو الأسوار أو أشجار أو الحواف.

● يمكن أيضاً استخدام الجهاز لجزء في الموضع التي يصعب الوصول إليها باستخدام جزاء العشب مثل الخفر والمحدرات وأراضي الغابات.

● يحظر إجراء أي تعديلات أو تغييرات غير مصرح بها من الجهة الصانعة.

● عدم استخدام الجهاز في بيئة رطبة أو ممطرة.

● عدم جز الشيء الرطبة.

حماية البيئة

المواد المستخدمة في التغليف قابلة إعادة التدوير. يرجى التخلص من مواد التغليف بطريقة تحافظ على البيئة.

تحتوي الأجهزة الكهربائية والالكترونية مواد مخصصة لإعادة التدوير و غالباً على إجزاء مثل البطاريات، متراتمات أو

الزيوت والتي قد تشكل خطراً على صحة الإنسان والبيئة في حالة التعامل معها أو تم التخلص منها بصورة خاطئة. إلا أن هذه الأجزاء ضرورية لتشغيل الجهاز بصورة سليمة. لا يجوز التخلص من الأجهزة الممنوعة بهذا الرمز مع النفايات المنزلية.

(REACH) إرشادات حول مواد المحتويات

تجد المعلومات الخاصة حول مواد المحتويات على الموقع: www.kaercher.com/REACH

الملاحق التكميلية وقطع الغيار

استخدام الملاحق التكميلية الأصلية وقطع الغيار الأصلية فقط، والتي تضمن تشغيل الجهاز بشكل آمن وحال من الاختلالات.

تجد المعلومات الخاصة بالملحقات التكميلية وقطع الغيار على الموقع www.kaercher.com

محظوظ التسلیم

محظوظ التسلیم الجهاز مصور على العبوة. تأكد من وجود جميع محظوظات العبوة عند فتحها. وفي حالة نقص آلة ملحقات التكميلية أو اكتشاف أي تلف بها تاتح عن عملية النقل، يرجى اخبار البائع.

رموز على الجهاز

تابع جميع التحذيرات وإرشادات السلامة. اقرأ وافهم جميع التعليمات قبل استعمال المنتج.

ارتد واقٍ للسمع ونظارات واقية مناسبة أثناء استخدام الجهاز.



لا تعرّض الجهاز للمطر أو لظروف رطبة.



لا تستخدم شفرات المنشار أو شفرات معدنية.



▲ تحذير • اضغط الجهاز بعد اخراج خط جديد على موضع التشغيل العادي قبل بتشغيل الجهاز. • تأكد من أن الجهاز في حالة

سلامة عن طريق إجراء فحص على فحصات موثقة إذاً كانت الخواص والمواصفات مشدودة بشكل ممكّن.

• تتحقق من أن الأجزاء المتحركة تعمل بشكل ممكّن وغير مسدودة أو من وجود أجزاء متكسرة أو تالفة. أعيّد باصلاح الجهاز التالف قبل استخدامه.

• قم بإيقاف المحرك ثم قم ب拔ازة علبة البطارية وتأكد من أن جميع الأجزاء المتحركة متوقفة بالكامل:

● قبل تنظيف الجهاز أو صيانته.

● قبل تغيير قطع الملاحقات.

▲ تنوية • لا تستخدم إلّا الملحقات والصيانتة الموصى بها من الجهة الصانعة. الملحقات التكميلية الأصلية وقطع الغيار الأصلية تتضمن تشغيل الجهاز بشكل آمن وحال من الاختلالات.

تنبيه • نظف المنتج بعد كل استعمال باستخدام فوطة ناعمة وجافة.

● لا يسمح بإجراء أعمال الخدمة والصيانة إلّا من قبل عمال متخصصين ومؤهلين بذلك فقط. تُنصح بأن يتم إرسال المنتج إلى مركز خدمة عتمد لاصلاحه.

● يسمح لك بإجراء العدادات والإصلاحات الموصدة في دليل التشغيل لهذا فقط. احصل بمركز خدمة العملاء المعتمد الذي تتعامل معه بشأن الإصلاحات الإضافية.

● اعيّد باستبدال علامات التحذير التالفة أو غير المقرورة على الجهاز إلى خدمة العملاء المعتمدة.

النقل والتخلص الآمن

▲ تحذير • قم بإيقاف الجهاز واتركه يبرد ثم قم ب拔ازة علبة البطارية قبل تخزينه أو نقله.

▲ تنوية • خطراً على الأصابة وحدث تلفيات بالجهاز. قم بتأمين الجهاز ضد الحرارة أو السقوط عند إجراء عملية النقل.

تنبيه • قم ب拔ازة جميع الأجسام الغربية من الجهاز قبل نقله أو تخزينه. ● قم بتخزين الجهاز في مكان جاف ذات هؤولة جيدة ولا يمكن للأطفال الوصول إليه. أبعد الجهاز عن المواد المسية للتآكل مثل المواد الكيميائية للحدائق. ● لا تخزن الجهاز في مكان خارجي.

مخاطر متبقية

▲ تحذير

● حتى وإن تم استخدام الجهاز كما هو منصوصاً عليه، إلا أن بعض المخاطر تبقى موجودة. من المحتمل أن تتشاءم المخاطر التالية عند استخدامه.

● يمكن أن يسبب الاهتزاز بإصابات. استخدم لكل الأداة المناسبة. استخدم المقاييس المخصوص لذلك وحدد فترة العمل والعراض.

● يمكن أن تؤدي الضوضاء إلى أضرار بالسمع. ارتد واقٍ للسمع وحدد فترة التحمل.

● إصابات ناجمة عن الأشياء المتطايرة.

تقليل المخاطر

▲ تنوية

● قد يؤدي استخدام الجهاز لفتره طويلة متواصلة إلى حدوث مشكلات بسريان الدورة الدموية في الدين وذلك بسبب الالهتزازات. لا يمكن أن يتم تحديد فترة الاستخدام بشكل عام، لأن ذلك يتعذر بعده عوامل متغيرة.

● استعداد سخيف لضعف الدورة الدموية (غالباً أصبع باردة، وخرق في الأصابع) درجة حرارة العصعص المنخفضة. استخدم قفازات دافئة لحماية اليدين.

● يتم عن طريق مسك الجهاز بشكل قوي منع دوران الدورة الدموية.

● تكون عملية الاستخدام المتواصلة أكثر ضرراً من الاستخدام المتقطع من خلال وقوف الاستراحة.

● عند استخدام الجهاز بشكل منتظم ولفترات طويلة وحيثما يتكرر ظهور عوارض مثل تهميل الأصابع، أصبع باردة، ينفي على مراجعة الطبيب.

المحتويات

- دانها على أن تكون أدوات القطع حادة ونظيفة. التحكم بأدوات القطع يكون أسهل ولا يتعدى سهولة. • قم باتفاق المحرك، إنما إذا: على البطارقة وتأكد من أن جميع الأجزاء المتحركة متوقفة بالكامل:
- قبل إجراء الأعدادات.
 - قبل ترک الجهاز بدون مراعاة.
 - قبل فحص الجهاز ترتفعه أو صيانته.
 - قبل إزالة انسداد أو تطبيق فتحة الإخراج.
 - قبل تغيير قطع المحافظات.
 - بعد إصابة جسم غير،تحقق أولاً من الأضرار بالجهاز ثم قم بإصلاح هذه قبل إعادة تشغيل الجهاز.
 - إذا افترز الجهاز بشكل غير طبيعي،تحقق أولاً من الأضرار بالجهاز ثم قم بإصلاح هذه قبل إعادة تشغيل الجهاز.

△ تحذير • يجب عليك دائم استخدام الجهاز إذا كنت تحت تأثير الأدوية أو المخدرات، التي تحد من القدرة على ردة الفعل. لا تستخدم الجهاز إلا عندما تكون في حالة صحية وعملية جيدة فقط.

- ارتد معدات حماية مناسبة عند العمل بالجهاز، معدات الحماية مثل لفحة الحماية من الغبار، أحذية ضد الانزلاق، خوذة حماية أو واقية للسمع تقلل من تضرر الإصابة. • استخدم تجهيزات حماية كاملة للنظر والسمع. • من المهم أن تتحقق حماية السمع القدرة على سماع أصوات التحذير لذلك احرص على معرفة المخاطر المحتملة التي تواجد بالقرب وفي مكان العمل. • ارتد خوذة واقية للرأس أثناء العمل في الأماكن التي يوجد فيها خطير سقوط أشياء **تحذير** • ارتد عند استخدام الجهاز سروال طوبل وبنطلون ملابس ذات أحذام طويلة وجزمة ضد الانزلاق. لا تعمل حافي القدمين، لا ترتدي الصنادل أو السراويل القصيرة. تجنب ارتداء ملابس فضفاضة أو ملابس سهلة باربعها وأواسطه **تحذير** • خطير الإصابة عن طريق إجراء الجهاز المترددة للملابس الفضفاضة أو الشعر أو الحلي. أبعد الملابس والحلبي عن الأجزاء المتحركة للماكينة. اربط الشعر الطويل إلى الخلف. • استخدم الجهاز وملحقاته وفقاً لهذه التعليمات فقط، مع مراعاة طروف العمل والعمل الذي يتquin انجازه لتجنب موقف خطورة.

تشغيل آمن

△ خطر • حدوث إصابات خطيرة عند تطهير أشياء من شعرة القبط أو عند التأتفق سلك أو جبل على أداء الجهاز. تتحقق بدقة من مكان العمل قبل الاستخدام بعدم وجود أي إشائات مثل حبة الجرارة، العصين، المعادن، أسلاك، عظام أو العاب و يجب إزالة هذه إذا وجدت.

△ تحذير • يمنع استخدام هذا الجهاز من قبل الأطفال أو الأشخاص الذين يعانون من آية إعاقة بدنية أو حسية أو عقلية أو من ليس لديهم الخبرة والمعارف. • استخدم الجهاز في ضوء الدهار أو عند وجود إصابة أصطناعية جديدة فقط. • لا تستخدم الجهاز على العصب الرطب أو تحت المطر. • حافظ على المسافة لا تقل عن 15 م تفصل عن الأشخاص والحيوانات. قم باتفاق الجهاز إذا اقترب أحد في هذا المجال. • حافظ على المسافة لا تكون أداء القطع تحت ارتفاع الشخص. • لا تستخدم الجهاز إنما إذا عندما لا تكن تجاهزه الحماية مرتكبة أو تالفة. • لا تستخدم خطوط كهربائية القطع المعنونة أدنا. • استخدم الجهاز في النطاف الخارجي فقط. • أبعد اليدين والقدمين من سطح العمل المراد قطعه، وخاصة إذا عند تشغيل المحرك. • خطير الإصابة، سترم إدراة القطع بعد إيقاف المحرك. • خطير الإصابة، الشفرة الموجة بغطاء الحماية عند خطوط القطع حادة للغاية، لذلك تجنب أي احتكاك وخاصة عند التنظيف. • تأكد من أن فتحات التهوية خالية من التركمات.

• تتحقق من عدم وجود تلميذات في الجهاز قبل كل استخدام وبعد كل ضربة. • الأجزاء المكافحة، على سبيل المثال يجب إصلاحها أو تغيير المكافحة من قبل قطع المكافحة المعمدة. • تأكد من أن رأس المحرك مركب ومشتبك بشكل صحيح. • تأكد من أن جميع تجهيزات الحماية، الحوارق والماقيض سليمة ومتينة بشكل آخر. • تأكد قبل استخدامه من أن قاطع الخطوط مرتكب بشكل صحيح وموثوق. • استخدم خطوط القطع البديلة من الجهة الصاغة فقط. لا يستخدم أي مرافق آخر للقطع. • خطير الإصابة. عدم إجراء أي تعديل على الجهاز.

ارشاد • يمكن في بعض المناطق أن تقييد اللوائح استخدام هذا الجهاز. عليك الحصول على استشارة من قبل الدوائر المحلية.

إرشادات السلامة

- اقرأ قبل أول استخدام للجهاز إرشادات السلامة هذه، ودليل التشغيل المفصلي هذا، وإرشادات السلامة المرفقة بعلبة البطارقة وكذلك دليل التشغيل المفصلي المرفق بعلبة البطارقة / جهاز الشحن القياسى. تم تصدير طبقاً لذلك. تأكد من تفعيل معايير السلامة الخاصة للستخدام لأدراك أو سليمهما على الماكينة.
- عليك إلى جانب الإرشادات الواردية في دليل التشغيل مراعاة القواعد العامة للسلامة والوقاية من الحوادث والتي يحددها المشرع القانوني.

درجات الخطير

△ خطير

- إشارة إلى خطير مباشر وشيك الحدوث وقد يؤدي إلى إصابات جسدية بالغة أو إلى الوفاة.

△ تحذير

- إشارة إلى موقف قد تحققه المخاطر وقد يؤدي إلى إصابات جسدية بالغة أو إلى الوفاة.

△ تحذير

- إشارة إلى موقف قد تتحققه المخاطر وقد يؤدي إلى إصابات بسيطة.

تنبيه

- إشارة إلى موقف قد تتحققه المخاطر وقد يؤدي إلى حدوث أضرار مادية.

إرشادات السلامة العامة

△ خطر • خطير الألغاج. يولد الجهاز الشرر والتي يمكنها أن تشعل الغبار أو الأدخنة. لا تستخدم الجهاز في المناطichi القابلة للأغجار والتي تتوارد قدرها سوالن قابلة للأشعال أو غازات أو غيرها.

△ تحذير • خطير الحوادث. عليك المحافظة على النطاف والإصابة الجديدة من منطقة العمل الخاصة بك. • عليك إبعاد الأطفال والأشخاص الآخرين من منطقة العمل أثناء استخدام الماكينة. • خطير الصعق الكهربائي. عليك حماية الجهاز من المطر والرطوبة. • يجب التشغيل غير المقصود. تأكد من أن زر التشغيل/الإيقاف يتوارد في وضع الإيقاف قبل توصيل عملية البطارقة، قبل رفع أو حمل الجهاز. • إصابات ناجمة عن مفتاح الضبط الذي لا يزال على الجزء الراوئ للإدراة. قم بازالة الضبط قبل تشغيل الجهاز. • لا تنسى بالمشي بل امشي ببطء عند العمل باستخدام الجهاز. لا تمسش بالمشي. تجنب وضع الجسم غير الطبيعي وقم بتغيير مكانك وقوفك بشكل أمن وحافظ على التوازن. • لا تستخدم الجهاز أبداً إذا لم يكن مفتاح التشغيل/الإيقاف بالمقصد بعمل أو توقف بشكل صحيح. • لا تحمل الجهاز أكثر من طاقته. • حافظ



THANK YOU!

MERCI! DANKE! ¡GRACIAS!



Registrieren Sie Ihr Produkt und profitieren Sie von vielen Vorteilen.

Register your product and benefit from many advantages.

Enregistrez votre produit et bénéficier de nombreux avantages.

Registre su producto y aproveche de muchas ventajas.

www.kaercher.com/welcome



Bewerten Sie Ihr Produkt und sagen Sie uns Ihre Meinung.

Rate your product and tell us your opinion.

Évaluer votre produit et dites-nous votre opinion.

Reseñe su producto y díganos su opinión.



www.kaercher.com/dealersearch

Alfred Kärcher SE & Co. KG

Alfred-Kärcher-Str. 28-40
71364 Winnenden (Germany)
Tel.: +49 7195 14-0
Fax: +49 7195 14-2212

