

COBRA

MODELS: CS420/CS520/CS620

COBRA PETROL CHAINSAW OWNER'S MANUAL

REV: SEPT 2016




Caution

Before using our chain saws, please read this manual carefully to understand the proper use of your unit. keep this manual handy.



 SAFETY FIRST

Instructions contained in warnings within this manual marked with a  symbol concern critical points which must be taken into consideration to prevent possible serious bodily injury, and for this reason you are requested to read all such instructions carefully and follow them without fail.

- NOTES ON TYPES OF WARNINGS IN THE MANUAL

 WARNING

This mark indicates instructions which must be followed in order to prevent accidents which could lead to serious bodily injury or death.

IMPORTANT

This mark indicates instructions which must be followed, or it leads to mechanical failure, breakdown, or damage.

NOTE


This mark indicates hints or directions useful in the use of the product.

Contents

1.PARTS LOCATION.....	2
2.WARNING LABELS ON THE MACHINE.....	2
3.SYMBOLS ON THE MACHINE.....	3
4.SAFETY PRECAUTIONS.....	3
5.INSTALLING GUIDE BAR AND SAW CHAIN.....	7
6.FUEL AND CHAIN OIL.....	9
7.OPERATING THE ENGINE.....	10
8.SAWING.....	14
9.MAINTENANCE.....	16
10.MAINTENANCE OF SAW CHAIN AND GUIDE BAR.....	18
11.SPECIFICATIONS.....	20

1. COMPONENT LOCATION

1. Front guard/Brake
2. Starter knob
3. Air cleaner
4. Choke knob
5. Throttle interlock
6. Rear handle
7. Throttle trigger
8. Engine switch
9. Fuel tank
10. Oil tank
11. Front handle
12. Saw chain
13. Guide Bar

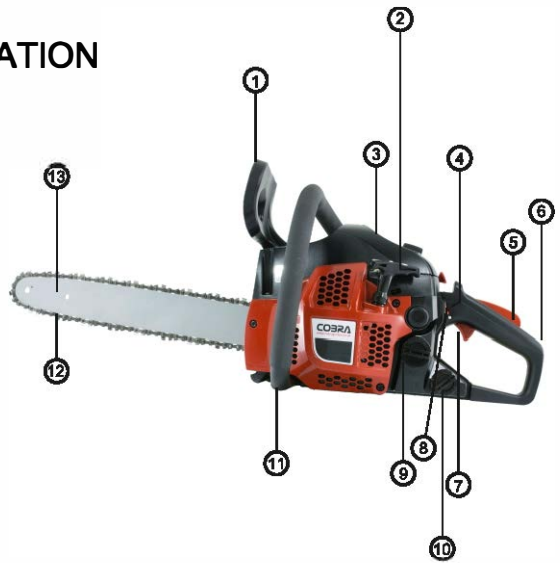

2. WARNING LABELS ON THE MACHINE

(1) Read owner's manual before operating this machine.



(2) Wear head, eye and ear protection.



(3) Use the chain saw with two hands



(4) Warning! Kickback is a danger



(5) Warning / Attention



IMPORTANT

If warning seals peel off or become soiled and impossible to read, you should contact the dealer from which you purchased the product to order new seals and affix the new seal(s) in the required location(s).

▲ WARNING

Never remodel the product. We won't warrant the machine, if you use the remodeled product or you don't observe the proper usage written in the manual.

3. SYMBOLS ON THE MACHINE

For safe operation and maintenance, symbols are carved in relief on the machine. According to these indications, please be careful not to make a mistake.

(a).The port to refuel the "MIX GASOLINE"

Position: fuel tank cap

(b).The port to refuel the "CHAIN OIL"

Position: oil cap

(c).The indication regarding the switch. Flipping the engine switch to the "O" (STOP) direction, the engine stops.

Position: rear-left of the unit

(d).The indication regarding the choke.

Pulling out the choke knob, the choke closes.

Position: rear-right of the unit

(e).The indication regarding the chain oil adjuster nut.

"MIN" direction-the oil flow decrease

"MAX" direction-the oil flow increase

Position: bottom of the clutch side

(f).The carburetor position of H-needle

The position of L-needle


The position of idle adjusting screw (T)

Position: rear-left of the unit

4. SAFETY PRECAUTIONS

■ BEFORE USING THE MACHINE

- a. Read this owner's manual carefully to understand how to operate and maintain this unit properly.
- b. A chainsaw should only be operated if you are physically and mentally fit. You should never use the product when under the influence of alcohol, when suffering from exhaustion or lack of sleep, when suffering from drowsiness as a result of having taken cold medicine, or at any other time when a possibility

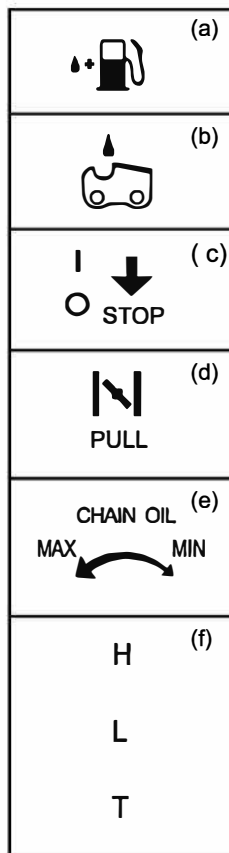



exists that your judgment might be impaired or that you might not be able to operate the machine properly and in a safe manner.



c. Avoid running the engine indoors. The exhaust gases contain harmful carbon monoxide.

d. Never use the product under circumstances like those described below:

1. When the ground is slippery or when other conditions exist which might make it not possible to maintain a steady posture
2. At night, at times of heavy fog, or at any other times when your field of vision might be limited and it would be difficult to gain a clear view of the area.



3. During rain storms, during lightning storms, at times of strong or gale-force winds, or at any other times when weather conditions might make it unsafe to use this product.

e. when using this product for the first time, before beginning actual work, learn safe handling from a skilled worker.

f. Lack of sleep, tiredness, or physical exhaustion results in lower attention spans, and this in turn leads to accidents and injury.

Limit the amount of time of using the machine continuously to somewhere around 10 minutes per session, and take 10~20 minutes of rest between work sessions. Also try to keep the total amount of work performed in a single day under 2 hours or less.

g. Be sure to keep this manual handy so that you may refer to it later whenever any questions arise.

h. Always be sure to include this manual when selling, lending, or otherwise transferring the ownership of the product.


i. Never allow children or anyone unable to fully understand the directions given in this manual to use this product.



■ WORKING GEAR AND CLOTHING

a. When using the product, you should wear proper clothing and protective equipments as follows.

- (1) **Helmet** (that conforms to EN 397)
- (2) **Safety goggles or mesh visor** (conforming to EN 166 or EN 1731 respectively)
- (3) **Thick work gloves** (ideally EN 381-7 chainsaw gloves)
- (4) **Non-slip-sole steel toe-cap work boots** (with gaiters conforming to EN 381-9) **or chainsaw boots** (to EN 381-3)
- (5) **Ear protectors** (conforming to EN 352-1)

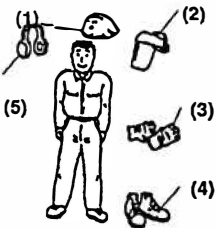

b. And you should carry with you.

1. Attached tools and files.
2. Properly reserved fuel and chain oil.



3. Objects to notify your working area (Rope, warning signs)
4. Whistle (for collaboration or emergency)
5. Hatchet or saw (for removal of obstacles)
6. First aid kit

c. Always wear appropriate full length trousers, ideally with protective properties (to EN 381-5). Appropriate footwear to protect against injury.

■ WORKING CONSIDERATIONS: HANDLING OF FUEL

- a. The engine of this product is designed to run on a mixed fuel which contains highly flammable petrol. Never store cans of fuel or refill the fuel tank in any place where there is a boiler stove, wood fire, electrical sparks, welding sparks, or any other source of heat or fire which might ignite the fuel.
- b. Smoking while operating the product or refilling its fuel tank is extremely dangerous. Always be sure to keep lit cigarettes and other sources of ignition away from the product at all times.
- c. When refilling the tank always turn off the engine first and take a careful look around to make sure that there are no sparks or open flames anywhere nearby before refueling. Refuel away from the working area.
- d. If any fuel spillage occurs during refueling, use a dry rag to wipe up spills before turning the engine back on again.
- e. After refueling, screw the fuel cap back tightly onto the fuel tank and then carry the product to a spot 4m or more away from where it was refueled before turning on the engine.



■ BEFORE STARTING ENGINE

- Check working place, the cutting object and cutting direction. If there are obstacles, remove it.
- Never start cutting until you have a clear work area, secure footing and a planned retreat path from the falling tree.
- Use caution and keep bystanders and animals out of the working area whose diameter is 2.5 times of the cutting object.
- Inspect the machine for worn, loose, or damaged parts. Never operate the machine that is damaged, improperly adjusted, or is not completely and securely assembled. Make sure that the saw chain stops moving when the throttle control trigger is released and that the engine switch is in good working order.

■ WHEN STARTING THE ENGINE

- Always hold the machine firmly with both hands when the engine is running. Use a firm grip with thumb and fingers encircling the handles.
- Keep all parts of your body away from the machine when the engine running.

- Before starting the engine, make sure the saw chain is not contacting anything.



■ OPERATION

- Keep the handles dry, clean and free of oil or fuel mixture.
- Avoid working alone with a chainsaw.
- Never touch the muffler, spark plug or other metallic parts of the engine while the engine is in operation or immediately after stopping the engine.
- Doing so could result in serious burns or electrical shock.
- Use extreme caution when cutting small size brush and saplings because slender material may catch the saw chain and be whipped toward you or pull you off balance.
- When cutting a limb that is under tension, be alert for spring back, so that you won't be struck when the tension in the wood fibers is released
- Check the tree for rot and dead branches that could fall during the felling operation.
- Always shut off the engine before setting it down.

■ KICKBACK SAFETY PRECAUTIONS FOR CHAIN SAW USERS

▲ WARNING

- Kickback may occur when the nose or tip of the guide bar touches an object, or when the wood closes in and pinches the saw chain in the cut. Tip contact in some cases may cause a lightning fast reverse reaction, kicking the guide bar up and back towards the operator. Pinching the saw chain along the top of the guide bar may push the guide bar rapidly back towards the operator. Either of these reactions may cause you to lose control of the saw which could result in serious personal injury.
- Do not rely exclusively on the safety devices built into your saw. As a chain saw user you should take several steps to keep cutting jobs free from accident or injury.
 - (1) With a basic understanding of kickback you can reduce or eliminate the element of surprise. Sudden surprise contributes to accidents.
 - (2) Keep a good grip on the saw with both hands, the right hand on the rear handle, and the left hand on the front handle, when the engine is running. Use a firm grip with thumbs and fingers encircling the chain saw handles. A firm grip will help you reduce kickback and maintain control of the saw.
 - (3) Make certain that the area in which you are cutting is free from obstructions. Do not let the nose of the guide bar contact a log, branch, or any other obstructions which could be hit while you are operating the saw.
 - (4) Cut at high engine speeds.

- (5) Do not overreach or cut above shoulder height.
- (6) Follow manufactures sharpening and maintenance instructions for saw chain.
- (7) Only use replacement bars and chains specified by the manufacturer or the equivalent.

■ MAINTENANCE

- In order to maintain your product in proper working order, perform the maintenance and checking operations described in the manual at regular intervals.
- Always be sure to turn off the engine before performing and maintenance or checking procedures.



▲ WARNING


The metallic parts reach high temperatures during running and after stopping the engine.

- Leave all maintenance other than the items listed in the Owner's Manual to a competent authorised servicing dealer.

■ TRANSPORTATION

- Always carry the unit with the engine stopped, the guide bar covered with the protector to the rear , and the exhaust away from your body.

5. INSTALLING GUIDE BAR AND SAW CHAIN

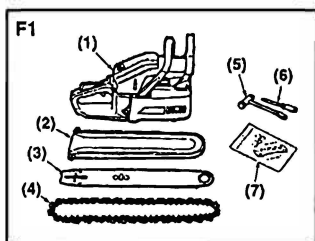

A standard saw unit package contains the items as the items as illustrated.(F1)


- (1) **Power unit**
- (2) **Bar protector**
- (3) **Guide bar**
- (4) **Chain saw**
- (5) **Plug wrench**
- (6) **Screwdriver for carburetor adjustment**
- (7) **Spike and mounting screws**

Open the box and install the guide bar and the saw chain on the power unit as follows:

▲ WARNING


The saw chain has very sharp edges. Use thick protective gloves for safety.

1. Pull the guard towards the front handle to check that the chain brake is not on.
2. Loosen the nuts and remove the chain cover.
3. Install the attached spike to the power unit.

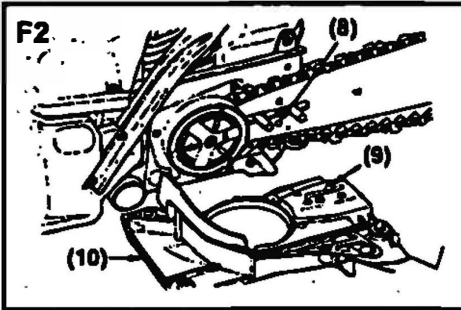

4. Gear the chain to the sprocket and, while fitting the saw chain around the guide bar, mount the guide bar to the power unit. Fit the chain tensioner bar(9) to the lower hole(8). Adjust the position of chain tensioner bar(9) on the chain cover to the lower hole(8) of the guide bar.(F2)

- (10) Chain cover
- (9) Tensioner Bar
- (8) Hole

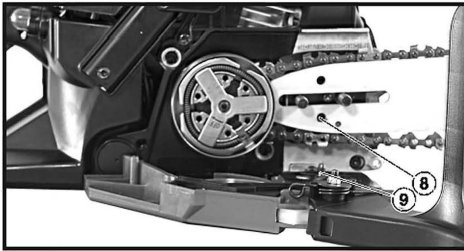


NOTE



F3 - (1)Chain Moving Direction

Pay attention to the correct direction of the saw chain.(F3)

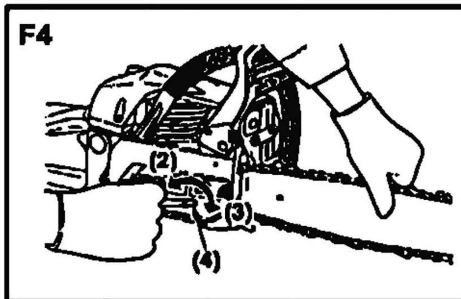

- (2) Loosen Direction
- (3) Tighten Direction
- (4) Tensioner screw

5. Fit the chain cover to the power unit and fasten the nuts to finger tightness.
6. While holding up the tip of the bar, adjust the chain tension by turning the tensioner screw until the tie straps just touch the bottom side of the bar rail.(F4)
7. Tighten the nuts securely with the bar tip held up (12~15Nm). Then check the chain for smooth rotation and proper tension while moving it by hand. If necessary, readjust with the chain cover loose.
8. Tighten the tensioner screw.


NOTE

A new chain will expand its length at the beginning of use. Check and readjust the tension frequently as a loose chain can easily derail or cause rapid wear to itself and the guide bar.

6. FUEL AND CHAIN OIL

■ FUEL

Mix a regular petrol (unleaded 95 RON) and a quality-proven motor oil for air cooled 2 cycle engines. Two stroke oil that meets the specification: API TC, ISO-L-EGC, JASO FC (Low Smoke) oil

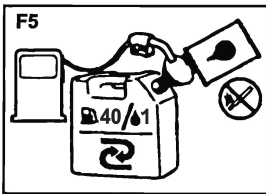

Recommended mixing ratio:

Mixture Ratio	Petrol : Oil
	40:1

Always use fresh unleaded petrol (95 RON) and semi-synthetic two-stroke oil meeting the above standards.

WARNING


- Keep open flames away from the area where fuel is handled or stored.
- Mix and store fuel only in an approved petrol container.

NOTE

Most engine troubles are caused, directly or indirectly, by the fuel used in the machine. Take special care **not** to mix a motor oil for 4 cycle engines.

■ CHAIN OIL






Use motor oil SAE# 10 W ~30 all year round or SAE #30~#40 in summer and SAE# 20 in winter.

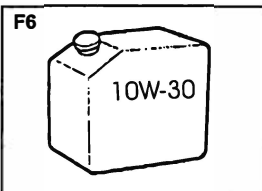

NOTE

Do not use wasted or regenerated oil that can cause damage to the oil pump.

7. OPERATING THE ENGINE

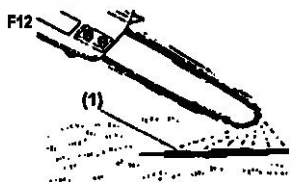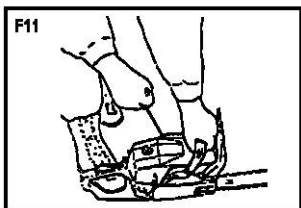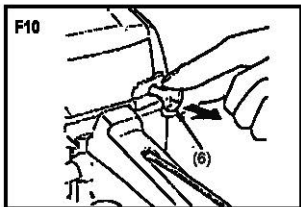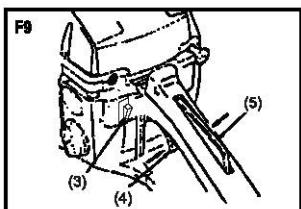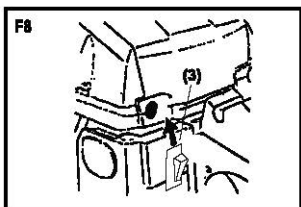

■ STARTING ENGINE PROCEDURE

1. Fill fuel and chain oil tanks respectively, and tighten the caps securely.(F7)
2. Put the switch to "I" position.(F8)
3. While holding the throttle lever together with the throttle interlock, push in the side throttle lock button and release the throttle lever to hold it at the starting position.(F9)

- (1) Chain oil
- (2) Fuel
- (3) Switch
- (4) Throttle lever
- (5) Throttle interlock
- (6) Choke knob

4. Pull out the choke knob to the closed position.(F10)
Push the primer bulb until fuel enters the bulb.

NOTE

When restarting immediately after stopping the engine, leave the choke knob at the open position.

5. While holding the saw unit securely on the ground, pull the starter rope vigorously.(F11)

WARNING

Do not start the engine while hanging the chain saw with a hand. The saw chain may touch your body. It's very dangerous.

6. When engine has ignited first, push in the choke knob and pull the starter again to start the engine
7. Allow the engine to warm up with the throttle lever pulled slightly.

WARNING

Keep clear of the saw chain as it will start rotating upon starting of engine.

■ CHECKING OIL SUPPLY


After starting the engine. run the chain at medium speed and see if chain oil is scattered off as shown

in the figure.(F12)

(1)Chain oil

The chain oil flow can be changed by inserting a screwdriver in the hole on bottom of the clutch side. Adjust according to your work conditions.

(F13) - Switch off the engine whilst adjusting.

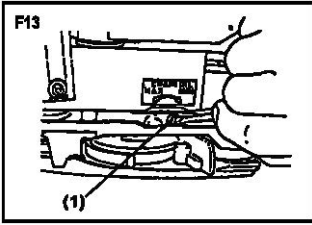

(1) Adjuster

NOTE

The oil tank should become nearly empty by the time fuel is used up. Be sure to refill the oil tank every time when refueling the unit.

■ ADJUSTING CARBURETOR(F14)

The carburetor on your unit has been factory adjusted, but may require fine tuning due to change in operating conditions. Before adjusting the carburetor, make sure that provided are clean air/fuel filters and fresh, properly mixed fuel. When adjusting, take the following steps:

NOTE


Be sure to adjust the carburetor with the bar chain attached

1. Stop engine and screw in both H and L needles until they stop. Never force. Then set them back the initial number of turns as shown below.

H needle: 1/4

L needle: 1/4

2. Start engine and allow it to warm up at half-throttle.
3. Turn L needle slowly clockwise to find a position where idling speed is maximum, then set the needle back a quarter(1/4) turn counterclockwise.
4. Turn idle adjusting screw(T) counterclockwise to that saw chain does not turn. If idling speed is too slow, turn the screw clockwise.

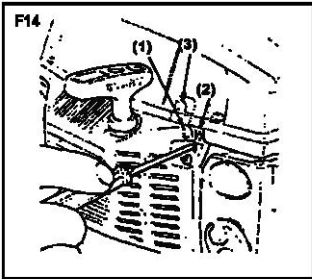

5. Make a test cut and adjust the H needle for best cutting power, not for maximum speed.

- (1) **L needle**
- (2) **H needle**
- (3) **Idle adjusting screw**

OPTION WHERE FITTED

■ CARBURETOR ANTI-FREEZE MECHANISM


Operating the chain saw in temperatures of 0-5°C at times of high humidity may result in ice forming within the carburetor, and this in turn may cause the output power of the engine to be reduced or for the engine to fail to operate smoothly. This product has accordingly been designed with a ventilation hatch the back of the air cleaner cover to allow warm air to be supplied to the engine and to there by prevent icing from occurring.

Under normal oircumstances the product should be used in normal operating mode, i.e., in the mode to which it is set at the time of shipment. However when the possibility exists that icing may occur, the unit should be set to operate in anti-freeze mode before use.(f15)

■ HOW TO SWITCH BETWEEN OPERATING MODES (F15)

1. Flip the engine switch to turn off the engine.
2. Remove the air cleaner cover from the cylinder cover
3. Loosen a screw and remove the screen on the back of the air cleaner cover.
4. Reattach the screen right side left so as to the anti-icing plate is on the right. Reinstall the cover.

- (1) **Air cleaner cover**
- (2) **Anti-icing plate**
- (3) **Screw**
- (4) **Normal operating mode**
- (5) **Anti-freeze mode**
- (6) **Screen**

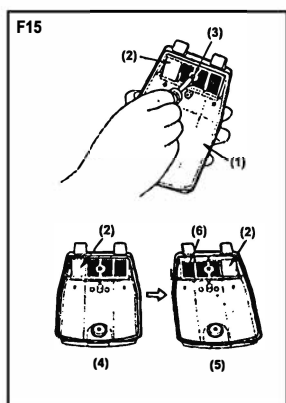

▲ WARNING


Continuing to use the product in anti-freeze mode even when temperatures have risen and returned to normal may result in the engine failing to start properly or in the engine failing to operate at its normal speed, and for this reason you should always be sure to return the unit to normal operating mode if there is no danger of icing occurring.

When using the saw with the anti-freeze mode, frequently check the screen and keep it clean of saw dust.

■ CHAIN BRAKE

This machine is equipped with an automatic brake to stop saw chain rotation upon occurrence of kickback while in saw cutting operation. The brake is automatically operated by inertial force which acts on the weight fitted inside the front guard. This brake can also be operated manually with the front guard turned down to the guide bar.(F16)

To release brake, pull up the front guard toward the front handle till "click" sound is heard.

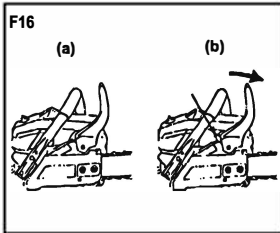


[Caution]

Be sure to confirm brake operation on the daily inspection

How to confirm


(1) Turn off the engine.

(2) Holding the chain saw horizontally, release your hand from the front handle, hit the tip of the guide bar to a stump or a piece of wood, and confirm brake operation. Operating level varies by bar size.(F17) In case the brake is not effective, ask your dealer to inspect and repair as required.

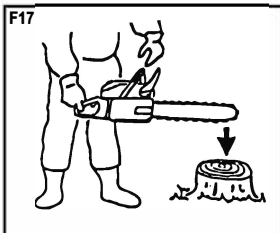

■ STOPPING THE ENGINE

1. Release the throttle lever to allow the engine idling

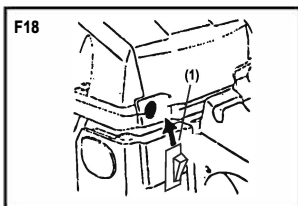

for a few minutes.
 2.Put the switch to the “O” (STOP) position.(F18)

(1) Switch


8.SAWING

▲ WARNING


- Before starting your work, read the: “For Safe Operation” section. It is recommended to first practice sawing easy logs. This also helps you get accustomed to your unit.
- Always follow the safety regulations. The chain saw must only be used for cutting wood. It is forbidden to cut other types of material. Vibrations and kickback vary with different materials and the requirements of the safety regulations would not be respected. Do not use the chain saw as a lever for lifting, moving or splitting objects. Do not lock it over fixed stands.
- Special training should be undertaken for working on wind blown and hung up trees.
- It is not necessary to force the saw into the cut. Apply only light pressure while running the engine at full throttle.
- When the saw chain is caught in the cut, do not attempt to pull it out by force, but use a wedge or a lever to open the way.

■ **GUARD AGAINST KICKBACK (F19)**

- This saw is equipped with a chain brake that will stop the chain in the event of kickback if operating properly. You must check the chain brake operation before each usage by running the saw at full the throttle for 1-2 seconds and pushing the front hand guard forward. The chain should stop immediately with the engine at full speed. If the chain is slow to stop or does not stop, replace the brake band and clutch drum before use.

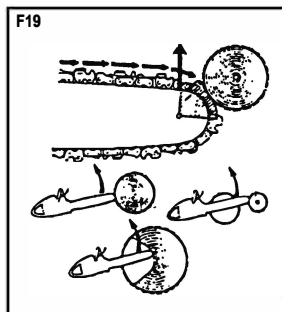

- It is extremely important that the chain brake be checked for proper operation before each use and that the chain be sharp in order to maintain the kickback safety level of this saw. Removal of the safety devices. Inadequate maintenance, or incorrect replacement of the bar or chain may increase the risk of serious personal injury due to kickback.

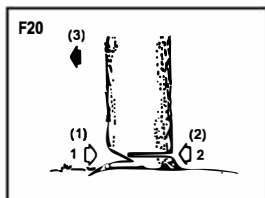

■ FELLING A TREE(F20)

1. Decide the felling direction considering the wind, lean of the tree, location of heavy branches, ease of job after felling and other factors
2. While clearing the area around the tree, arrange a good foothold and retreat path.
3. Make a notch cut one-third of the way into the tree on the felling side.
4. Make a felling cut from the opposite side of the notch and at a level slightly higher than the bottom of the notch.

▲ WARNING

When you fell a tree, be sure to warn your neighboring workers of the danger.


- (1) Notch cut
- (2) Felling cut
- (3) Felling direction

■ Bucking and Limbing

▲ WARNING

- **Always ensure your foothold. Do not stand on the log.**
- **Be alert to the rolling over of a cut log. Especially when working on a slope, stand on the uphill side of the log.**
- **Follow the instructions in "For safe Operation" to avoid kickback of the saw.**

Before starting work, check the direction of bending force inside the log to be cut. always finish cutting from the opposite side of bending direction to prevent

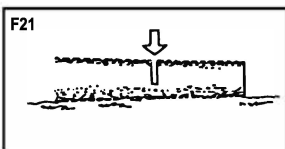


the guide bar from being caught in the cut.

A Log lying on the ground (F21)

Saw down halfway, then roll the log over and cut from the opposite side.

A Log hanging off the ground (F22)


In area A, saw up from the bottom one-third and finish by sawing down from the top. In area B, saw down from the top one-third and finish by sawing up from the bottom.

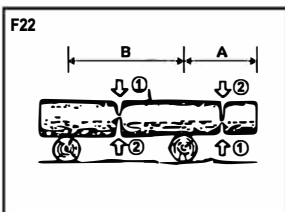

Cutting Limb of Fallen Tree (F23)

First check to which side the limb is bent.

Then make the initial cut from the bent side and finish by sawing from the opposite side.

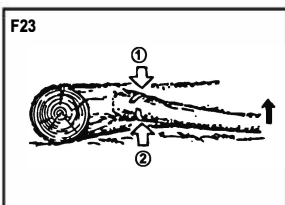

⚠ WARNING


Be alert to the springing back of a cut limb.

Pruning of Standing Tree(F24)

Cut up from the bottom, finish down from the top.

⚠ WARNING

- Do not use an unstable foothold or ladder.
- Do not overreach.
- Do not cut above shoulder height.
- Always use your both hands to grip the saw.

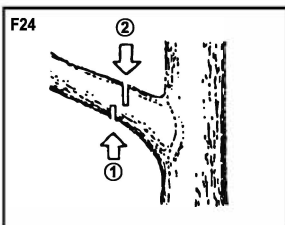

9. MAINTENANCE


⚠ WARNING

Before cleaning, inspecting, or repairing your unit, make sure that engine has stopped and is cool. Disconnect the spark plug to prevent accidental starting.

■ MAINTENANCE AFTER EACH USE


1.Air filter

Dust on the cleaner surface can be removed by tapping a corner of the cleaner against a hard surface. To clean dirt in the meshes, split the cleaner in two halves and brush in gasoline. When using compressed air, blow from the inside.(F25)

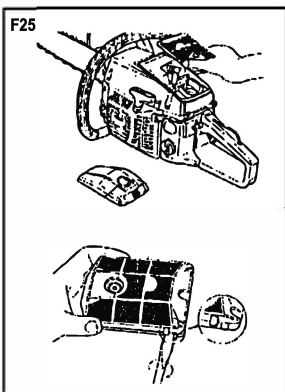

2.Oiling port


Dismount the guide bar and check the

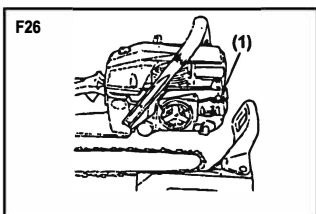


oiling pot for clogging.(F26)

3. Guide bar

When the guide bar is dismantled, remove Saw dust in the bar groove and the oiling port.(F27)
Grease the nose sprocket from the feeding port on the tip of the bar.(F28)

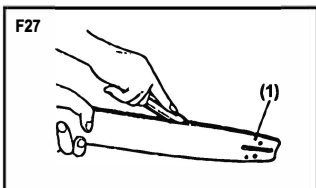

- (1) Oiling port
- (2) Grease port
- (3) Sprocket

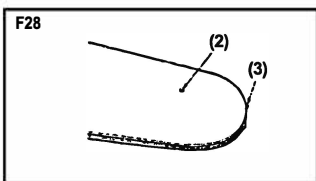

4. Others

Check for fuel leakage and loose fastenings and damage to major parts.


especially handle joints and guide bar mounting. If any defects are found, make sure to have them repaired before operating again.

■ PERIODICAL SERVICE POINTS

1. Cylinder fins

Dust clogging between the cylinder fins will cause overheating of the engine. Periodically check and clean the cylinder fins after removing the air cleaner and the cylinder cover.

When installing the cylinder cover, make sure that switch wires and grommets are positioned correctly in place.(F29)

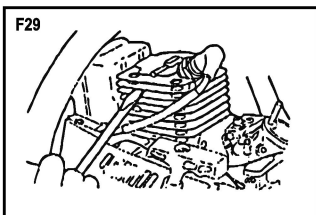


NOTE

Be sure to block the air intake hole.


2. Spark plug(F30)

Clean the electrodes with a wire brush and reset the gap to 0.65 mm as necessary.

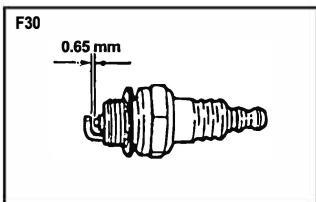

3. Sprocket(F31)

Check for cracks and for excessive wear interfering with the chain drive. If wear is found replace it with a new one. Never fit a new chain on a worn sprocket, or a worn chain on a new sprocket.

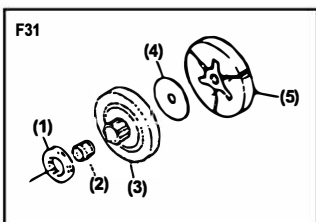

- (1) Sprocket

- (2) **Needle bearing**
- (3) **Clutch drum**
- (4) **Spacer**
- (5) **Clutch shoe**

4. Fuel filter

Disassemble the filter and wash with gasoline, or replace with new one if needed.

5. Oil filter

Disassemble the filter and wash with gasoline, or replace with new one if needed.

6. Front and Rear dampers

Replace if fitted part is peeled or cracking is observed on the rubber part.

10.MAINTENANCE OF SAW CHAIN AND GUIDE BAR.

■ SAW CHAIN

▲ WARNING

It is very important for smooth and safe operation to keep the cutters always sharp.

Your cutters need to be sharpened when:

- Sawdust becomes powder-like.
- You need extra force to saw in.
- The cut way does not go straight
- Vibration increases
- Fuel consumption increases

Cutter setting standards:

▲ WARNING




Be sure to wear safety gloves.

- Before filing:
- Make sure the saw chain is held securely
- Make sure the engine is stopped
- Use a round file of proper size for your chain.

Chain type: 21VB

File size: 3/16 in (4.76 mm)

F32

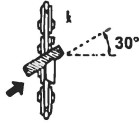

Place your file on the cutter and push straight forward. Keep the file position as illustrated.(F32)

After every cutter has been set, check the depth gauge and file it to the proper level as illustrated.(F33)

▲ WARNING

Be sure to round off the front edge to reduce the chance of kickback or tie-strap breakage.

- (1) **Appropriate gauge checker**
- (2) **Make the shoulder round**
- (3) **Depth gauge standard**

Make sure every cutter has the same length and edge angles as illustrated (F34)

F33



(3) 21BP, 21VB:
.025" (0.65mm)



- (4) **Cutter length**
- (5) **Filling angle**
- (6) **Side plate angle**
- (7) **Top plate cutting angle**




■ **GUIDE BAR**

- Reverse the bar occasionally to prevent partial wear.
- The bar rail should always be a square.

Check for wear of the bar rail. Apply a ruler to the bar and the outside of a cutter. If a gap is observed between them the rail is normal.



Otherwise, the rail is worn. Such a bar needs to be corrected or replaced.(F35)

F34



- (1) **Ruler**
- (2) **Gap**
- (3) **No gap**
- (4) **Chain tilts**

F35

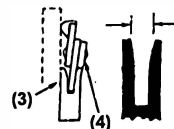


11.SPECIFICATIONS

1	Chain saw Model	CS420 / CS520 / CS620
2	Mass (without guide bar and chain)	6kg / 7kg / 7.5kg
3	Dimensions(without bar and chain)	410×235×265 (mm)
4	Fuel	Mixture (Petrol 40:Two-cycle oil 1)
5	Fuel tank capacity	550ml / 550ml / 550ml
6	Chain oil	Motor oil SAE#10W-30
7	Oil tank capacity	300ml / 300ml / 300ml
8	Engine displacement	42cc / 49.2cc / 61.5cc
9	Maximum engine power	1.4kw / 2kw / 2.3kw
10	Maximum engine speed with cutting attachment	10000rpm
11	Maximum Engine speed at idling	3000rpm
12	Sprocket	7T×3/8 / 7T×0.325 / 7T×0.325
13	Saw chain pitch	3/8(in) / 0.325(in) / 0.325(in)
14	Saw chain gauge	0.050(in) / 0.058(in) / 0.050(in)
15	Guide bar type	Sprocket nose
16	Guide bar size	14in / 16in / 18in / 20in
17	Oil feeding system	Automatic pump with adjuster

NOTICE: Specifications are subject to change without notice.



EC-DECLARATION OF CONFORMITY

EC Declaration of Conformity	
We herewith declare,	Cobra Garden Machinery Henton & Chattell Ltd, London Road, Nottingham NG2 3HW United Kingdom
that the following machine complies with the appropriate basic safety and health requirements of the EC Directive based on its design and type, as brought into circulation by us.	
In case of alteration of the machine, not agreed upon by us, this declaration will lose its validity	
Machine Description:	Petrol Chainsaw 42cc / 49.2cc / 61.5cc
Machine Type:	Cobra CS420(PN4200-13) / CS520(PN5200-13) / CS620(PN6150-13)
Displacement	42cc/49.2cc/61.5cc
Measured sound power level:	106dB(A) / 114dB(A) / 114dB(A)
Guaranteed sound power level:	110dB(A) / 116dB(A) / 118dB(A)
Name of Notified Body	Intertek Testing Services Ltd., Building No 86 1198 Qinzhou Road North Shanghai, 200233 TUV Product Services No.88 Heng Tong Road Shanghai 200070
Applicable EC Directives	EC Machinery Directive:2006/42/EC EC Directive of Electromagnetic Compatibility:2004/108/EC EC Directive of noise emission: 2005/88/EC
Applicable Harmonized Standards	EN ISO 11681-1:2011 EK9 2007-18:2007-05-31 EN ISO 14982:2009
Authorized Signature/Date	 Peter J. Chaloner 03-09-2016
Title of Signatory	Managing Director
Name and address of the person authorised to compile the technical file	Cobra Garden Machinery Henton & Chattell Ltd, London Road, Nottingham NG2 3HW United Kingdom

WARRANTY

This product is warranted in accordance with legal regulations for a 24 month period effective from the date of purchase by the first user.

This product will not be covered if used in a commercial application.

This warranty covers all material or production failures, it does not include: defects from normal wear and tear, parts such as , bearings, brushes, cables, air cleaning elements, brake pad, clutch disc, tyre, wheel, recoil starter rope, belts, cutter chains, plugs, lubricant oils and grease or accessories. Damage or defects resulting from abuse, accidents or alterations, natural fading of painted or plated surfaces, sheet peeling and other natural deterioration.

Any damage that occurs from the use of non-genuine Cobra parts will not be covered.

We reserve the right to reject any claim where the purchase cannot be verified or when it is clear that the product was not maintained properly. (Clean ventilation slots, carbon brushes and serviced regularly)

Expenses incidental to the warranty claim that are not covered;

-Compensation for loss of time, commercial loss or rental costs of substitute product.

-Costs incurred for transportation to and from the dealership.

Any damage that occurs from the following will not be covered; exposure of the product to smoke and soot, chemical agents, bird droppings or other animal waste, seawater, sea breeze, salt or other environmental phenomena.